User's Guide



Exicycler[™] 96 Fast Real-Time Quantitative Thermal Block





Real-time Quantitative Thermal Block



User's Guide

Version No.: 1.2 (2016-12)

Please read all the information in booklet before using the unit



Bioneer Corporation 8-11, Munpyeongseo-ro, Daedeok-gu, Daejeon, 34302, Republic of Korea Tel: +82-42-930-8777 Fax: +82-42-930-8688 Email: sales@bioneer.com www.bioneer.com

Exicycler[™] is a trademark of Bioneer Corporation. Copyright 2016. Bioneer Corporation. All Rights Reserved.



U.S. and Canadian Safety Standards

Standard for Electrical equipment for measurement, control and laboratory use; Part1: General Requirements, UL 61010-1, 2nd Ed, Rev., October 28, 2008&CAN/CSA-C22. 2 No. 61010-1-04(R2009) Part 2: Particular Requirements for Automatic and Semi-Automatic Laboratory Equipment for Analysis and Other Purposes, CAN/CSA-C22. 2 No. 61010-2-081:04 Part 2-010: Particular Requirements for Laboratory Equipment for the Heating of Materials CAN/CSA-C22.2 NO. 61010-2-010-04 Part 2: Particular requirements for in vitro diagnostic (IVD) medical equipment, CAN/CSA-C22. 2 No. 61010-2-101:04



Contents

	1
How to Use This Guide	2
Symbols on <i>Exicycler</i> ™ 96 Fast	4
Safety Instructions	5
Safety Warnings and Cautions	6
Location Consideration and Installation	6
Operation and Maintenance	8
Introduction	9
Overview	10
Intended purpose	10
System Components and Specifications	
Overview	12
System Components	12
Specifications	13
System Views	15
Installation and System Operation	
Overview	17
Site Requirements	17
	17
Required Materials	17
Required Materials Unpacking <i>Exicycler</i> ™ 96 Fast	
Required Materials Unpacking <i>Exicycler</i> ™ 96 Fast Setting Up the Computer	18
Required Materials Unpacking <i>Exicycler</i> ™ 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> ™ 96 Fast	18 18
Required Materials Unpacking <i>Exicycler</i> [™] 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> [™] 96 Fast Installing the Operation and Analysis Program	18 18 19
Required Materials Unpacking <i>Exicycler</i> [™] 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> [™] 96 Fast Installing the Operation and Analysis Program Installing Bioneer Package	18 18 19 19
Required Materials Unpacking <i>Exicycler</i> [™] 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> [™] 96 Fast Installing the Operation and Analysis Program Installing Bioneer Package Installing .NET Framework 1.1 Package	18 18 19 19 22
Required Materials Unpacking <i>Exicycler</i> [™] 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> [™] 96 Fast Installing the Operation and Analysis Program Installing Bioneer Package Installing .NET Framework 1.1 Package Installing Exicycler4 Software	
Required Materials Unpacking <i>Exicycler</i> [™] 96 Fast Setting Up the Computer Connecting the Computer and <i>Exicycler</i> [™] 96 Fast Installing the Operation and Analysis Program Installing Bioneer Package Installing .NET Framework 1.1 Package Installing Exicycler4 Software Troubleshooting	

Running Real-Time PCR Using <i>Exicycler</i> [™] 96 Fast Software	30
Starting 'Run Exicycler4' program	31
Reagents and Consumable Products	45
Performance Maintenance	46
Performing System Diagnosis using ExiCfg	47
Guide to AccuPower [®] Fluorescence test kit for calibration	
Before Starting Calibration with the Fluorescence test kit	
Fluorescence test plate preparation	
Calibration using ExiCfg	51
Mask Calibration	51
Background Calibration	55
Multi-channel Calibration	57
Cleaning the main body	61
Precautions for PCR tube loading	62
Replacing Fuses	63
Returning <i>Exicycler</i> ™ 96 Fast for Service	64
Troubleshooting	65
Ordering Information and Warranty	

Before Starting

How to Use This Guide

This guide is written for researchers and laboratory staff responsible for installing and maintaining *Exicycler*[™] 96 Fast Real-Time Quantitative Thermal Block.

General Requirements for Installation

This guide assumes that you:

- Are familiar with Microsoft[®] Windows[®] 7 operating system.
- Have basic techniques for handling DNA and RNA samples for PCR.
- Have basic skills for data storage, copying and pasting data into hard drives.
- Have an experience in setting up a network. (Using any data generated by *Exicycler*[™] 96 Fast requires setting up a network.)

Word Conventions

- Bold signifies user action such as typing a text or clicking a button. For example: Type **Test** and click **OK** to move to the next step.
- *Italic* represents important words or sentences and is also used for emphasis. For example: *After analysis, you must save data using Save As.*
- A right arrow in bold (>) separates consecutive commands you selected from a main menu or shortcut menu. For example:

File> Config> Scan

How to Obtain More Information

For more information about *Exicycler*[™] 96 Fast, please visit us online at <u>www.bioneer.com</u>.

How to Reach Customer Support

To obtain prompt customer support, please call us at +82-42-930-8777. You can also obtain technical support through www.bioneer.com (Email: exicycler-support@bioneer.com).

Product Use Limitations

- *Exicycler*[™] system is designed and sold for in vitro diagnostic (IVD) applications in combination with the diagnostic kits manufactured by Bioneer and labeled for diagnostic purposes. *Exicycler*[™] system can also be used for life science research and other laboratory purposes.
- Gradient function of *Exicycler*[™] 96 Fast is not available in US, EU, Japan and Germany.
- Use of *Exicycler*[™] 96 is covered by U.S. patents Nos. 8,139,210, 8,427,643, and their foreign counterparts or pending patents. The purchase of these products includes a limited, non-transferable immunity from suit under the forgoing patents for using only this amount of product solely for the purchaser's own internal research. No other patent rights to use this product for any other purpose or for commercial purpose, including without limitation reporting the results of purchaser's activities for a fee or other commercial consideration, are conveyed expressly, by implication, or by estoppels. Further information on purchasing licenses may be obtained by contacting Bioneer at licensing@bioneer.com.

Safety Labels Description on *Exicycler*[™] 96 Fast

English	Hot surface. Note that you can hot surface temperature.
Francais	Surface chaude Faites attention à la surface chaude.
English	Do not work long hours at low temperature to Bath. We had a condensate can cause equipment malfunctions.
Francais	Ne pas utiliser le bain à basses températures pendant plusieurs heures. Risque de condensation pouvant entrainer des fonctionnements défectueux de l'équipement.
English	Door Attention Behavior. Open or close attention to when you crash and insertion.
Francais	Manipulation de la porte. Risque de blessures corporelles (pincement/écrasement) lors de. l'ouverture/fermeture de la porte.
English	CRUSH HAZARD Stay clear of this area during Door operation. Injury can result if you shut your fingers in the door.
Francais	Risque d'écrasement Ne pas rester proche de la porte durant son fonctionnement. Risque d'écrasement de doigts en cas de contact avec la porte.

Symbols on *Exicycler*™ 96 Fast

Safety Symbols on *Exicycler*[™] 96 Fast

The following table describes the safety symbols that may be displayed on *Exicycler*[™] 96 Fast. Each symbol may appear by itself or with text that explains the relevant hazard.



Hot surface.
Note that you can hot surface temperature.
Do not work long hours at low temperature to Bath.
We had a condensate can cause equipment malfunctions.
Door Attention Behavior.
Open or close attention to when you crash and insertion.
CRUSH HAZARD
Stay clear of this area during Door operation.
Injury can result if you shut your fingers in the door.

Electrical Symbols on Exicycler[™] 96 Fast

The following table describes the electrical symbols that may be displayed on *Exicycler*[™] 96 Fast.



Indicates **On** position of the main power switch.

Indicates **Off** position of the main power switch.

Indicates a standby switch by which the instrument is switched on to the **Standby** condition.

Indicates a protective grounding terminal in the instruments that must be connected to earth ground.

Indicates a terminal that can receive or supply alternating current or voltage. Indicates a terminal that can receive or supply alternating or direct current or voltage.

Environmental Symbols on the Exicycler[™] 96 Fast

The following symbol (WEEE) applies to *Exicycler*[™] 96 Fast placed on the European market.

Do not dispose of *Exicycler*[™] 96 Fast as unsorted municipal waste.

Follow local municipal waste ordinances for proper disposal provisions to reduce environmental impact of waste from electrical and electronic instrument.



European Union customers:

Call your local European office for Bioneer instruments pick-up and recycling.

Safety Instructions

Safety Warnings and Cautions

Safety instructions in this guide book are to cover possible dangerous conditions and situations that may occur. It is your responsibility to read this guide thoroughly when installing, maintaining, or operating *Exicycler*[™] 96 Fast. The following safety alerts will be used in this section:

Hazards or dangerous actions that may result in severe injury.
Hazards or dangerous actions that may result in minor injury or damage.
Hazards or dangerous actions that may cause a burn.
Hazards or dangerous actions that may result in electric shock.

Location Consideration and Installation

General Instrument Safety

- Check power voltage rating before connecting to the instrument and an electrical outlet. *Exicycler*[™] 96 Fast is configured for 100-240VAC (±10%). Using AVR (Automatic Voltage Regulator) or UPS (Uninterrupted Power Supply) is recommended.
- 2) *Exicycler*[™] 96 Fast must be grounded for protection against electric shock. If not, it may cause serious injury and system damage.
- 3) Do not place any objects in front of the main door of *Exicycler*[™] 96 Fast that can interfere with door operation.
- 4) Leave 50 cm space between *Exicycler*[™] 96 Fast and the wall for proper ventilation.
- 5) Do not install *Exicycler*[™] 96 Fast in a dusty environment to prevent false operation or technical damage.
- 6) Keep *Exicycler*[™] 96 Fast away from heat sources.
- 7) *Exicycler*[™] 96 Fast must not be installed in an area where it is exposed to water or is humid. It may cause electric shock, a fire, or system damage.
- 8) *Exicycler*[™] 96 Fast must not be installed in an area where it is exposed to combustible or flammable vapor. In case of a gas leak, open windows and let fresh air in. Do not operate any electrical switch during a gas leak. It may cause an explosion or fire.
- 9) Do not disassemble or repair *Exicycler*[™] 96 Fast yourself. It may cause a fire, electric shock, and system damage. A limited warranty does not cover unauthorized alterations or damage due to abuse.

Precautions regarding the electrical environment

CAUTION MARNING A DANGER

- 1) If the power cord is loose, do not use the instrument. Overheated power cord may result in shock or fire.
- 2) Do not operate multiple instruments out of a single wall outlet. The load may cause the instrument to overheat and lead to fire.
- 3) When plugging or unplugging the power cord from a wall outlet, make sure your hands are completely dry. Wet or moist hands may cause electric shock.
- 4) A convenient and safe power cord should be available. The power cord provided by our company should be used.
- 5) Socket outlets should be at least 1.5 m from a sink or wash basin.
- 6) Power cord should not be repaired with insulating tape. Water can still penetrate insulating tape and

power cord.

- If you use other power cord, it should be adequate for the electrical capacity for *Exicycler*[™] 96 Fast (250V, 16A, 0.75mm², VDE).
- 8) Plugs should match the socket outlets.
- 9) Unplug the power cord from *Exicycler*[™] 96 Fast when not in operation for a long period of time to prevent the possibility of fire by overheating.
- 10) *Exicycler*[™] 96 Fast is equipped with a 3-conductor AC power cord that, when connected to an appropriate AC power outlet, grounds (earths) the instrument. To preserve this protection feature, do not operate the instrument from an AC power outlet that has no ground (earth) connection.
- 11) Improper fuse or high-voltage supply can damage the instrument wiring system and cause a fire. Before turning on the instrument, verify that fuses are properly installed and that the instrument voltage matches the power supply in your laboratory.
- 12) For continued protection against risk of fire, replace fuse types (250V, F10AL, 2ea) according to rating specified for the instrument.

Installation Safety

- 1) Place and install *Exicycler*[™] 96 Fast away from direct sunlight.
- It is recommended that you turn off the computer and unplug the power cable before connecting it to *Exicycler*[™] 96 Fast. If the computer is turned on while connecting, the communication port connector either in the computer or *Exicycler*[™] 96 Fast may get damaged.
- 3) Make sure that the USB cable is firmly connected to *Exicycler*[™] 96 Fast and the computer. Unstable connection may cause damage to the communication port connector or data transfer errors.
- 4) Built-in camera of *Exicycler*[™] 96 Fast is a static-sensitive device. Pay particular attention to any cables connected to *Exicycler*[™] 96 Fast to avoid static damage.

Cautions

ACAUTION

- 1) Ensure that the power cable is clean and connect it firmly to *Exicycler*[™] 96 Fast.
- 2) Operate *Exicycler*[™] 96 Fast in a place where the temperature is always between 15°C and 30°C. Poor performance is influenced by extreme temperature. High temperature can cause mis-operation and poor performance.
- 3) Operate the system in a place where humidity is always between 20 % and 80% with no condensation. Highly humid environment can cause corrosion of internal components and low humidity can lead to errors.
- 4) Do not place any objects behind or by the side of *Exicycler*[™] 96 Fast that can interfere with ventilation and cause errors.
- 5) The internal optical components of *Exicycler*[™] 96 Fast may get damaged when the instrument falls or is exposed to excessive physical shock.
- 6) Unplug the power cable from *Exicycler*[™] 96 Fast when not in operation for a long period of time to prevent the possibility of fire by overheating.

Operation and Maintenance

Warnings

- 1) The system can be hazardous when misused.
- 2) Keep the 96-well thermal block area clean to prevent damage and to generate accurate experimental data.
- 3) After any Real-Time PCR runs including 'Scan' or 'Melting', allow the light source lamp to cool down for at least 10 minutes. Continuous operation without a break will reduce the lamp life span and cause errors.
- 4) Do not place a piece of paper or a plastic cover under *Exicycler*[™] 96 Fast. It could cause a fire.
- 5) Do not turn off *Exicycler*[™] 96 Fast right after a Real-Time PCR run is done. Wait until the cooling fan has stopped running completely. Cooling fan remains running for about 3 minutes to cool down the lamp after each Real-Time PCR run.
- 6) Do not cover *Exicycler*[™] 96 Fast with a piece of paper or a plastic cover. This may cause a fire or failure of the system.
- Set 'Power Options Properties' in the Control Panel to 'Turn off monitor', 'Turn off hard disks', 'System standby', and 'System hibernates' to 'Never'. Otherwise, data transfer between *Exicycler*[™] 96 Fast and the computer will be interrupted.

IMPORTANT:

*Exicycler*TM 96 Fast should be operated in a clean condition. Contaminants, such as dust, can cause problems and reduce the life span of *Exicycler*TM 96 Fast. Please prevent dust from entering into *Exicycler*TM 96 Fast. In order to extend life span of *Exicycler*TM 96 Fast, thoroughly remove dust periodically.

Introduction

Overview

*Exicycler*TM 96 Fast Real-Time Quantitative Thermal Block combines a thermal block in a special 96well format and an innovative fluorescence detector. The detector monitors fluorescence emitted as an indicator for amplified nucleic acid product during each PCR cycle in real time.

Thermal block is built into the lower part of $Exicycler^{TM}$ 96 Fast, which carries out a thermal cycling. The detector is located in the upper part of $Exicycler^{TM}$ 96 Fast, which measures the fluorescence emitted from samples in the thermal block in real time and transfers data to the computer for analysis. Data transferred from the detector is analyzed with $Exicycler^{TM}$ analysis Program.

*Exicycler*TM 96 Fast Real-Time Quantitative Thermal Block provides a maximum ramping rate of 5.0°C/sec, and features various functions such as gradient, time increment, temperature increment, and ramp rate control for myriad applications.

*Exicycler*TM 96 Fast Real-Time Quantitative Thermal Block detector consists of a light source and a detector. The light source is an energy source to excite fluorescent dyes. A short arc lamp is bright and has a long life span. A white-light source is divided into particular wavelength groups by band path filters. The band path filters in *Exicycler*TM 96 Fast covers within 475 to 690 nm and works as a set consisting of an excitation and an emission filter. Five filter sets are provided for various applications. Therefore, no additional band path filters is required. Also, Bioneer's imaging technique based on polarization of light enhances detection sensitivity for robust and reliable results. Patented (KR10-1089045, US8427643) polarizing optical apparatus mitigates the common problem of a reflection light, allowing precise quantification and target discrimination.

The detector, a highly sensitive 2D CCD camera, is highly sensitive and detects multiple fluorescence signals from a 96-well plate at once. This simultaneous detection has a great advantage over a sequential detection. This innovative detector, invented by Bioneer, reduces well-to-well variation and has minimized dye-to-dye interference, therefore providing more accurate results.

Bioneer's state-of-the-art technologies applied to $Exicycler^{TM}$ 96 Fast generate a uniform light surface over the thermal block. This allows detection of multiple fluorescent signals emitted from various dyes through the light surface and separate signals within a selective wavelength range of each dye.

Exicycler[™] 96 Fast Real-Time Quantitative Thermal Block features an auto loading function for automation reducing errors and self-diagnosis for diagnosing systematical conditions of *Exicycer*[™] 96 Fast for users' convenience. *Exicycler*[™] 96 Fast software is composed of three main programs.

A set up program for calibration test, diagnosis and confirmation of the instrument's information.

An operation program for creating a protocol, assigning a probe and plate, saving & displaying data while operating *Exicycer*[™] 96 Fast.

Analysis software that comes with *Exicycler*[™] 96 Fast has 4 different tools. The analysis program includes Absolute Quantification, Relative Quantification, SNP genotyping, and Existentence / Non-existentence. It is applicable to Gene expression, Quantification of cell and virus, and SNP genotyping.

Intended purpose

This device is used for the qualitative or quantitative analysis of specific DNA/RNA in samples.

System Components and Specifications

Overview

Exicycler[™] 96 Fast Real-time Quantitative Thermal Block is warranted by Bioneer against manufacturing defects in materials and workmanship for a limited warranty period of one year. Bioneer will charge for repairing products for the following conditions:

- Fault caused by the customer.
- The product is repaired after expiry of the warranty period.

Before you install *Exicycler*[™] 96 Fast, check shipped materials with the system component listed below:

System Components

Component Lists		Check
<i>Exicycler</i> [™] 96 Fast	1	
USB 2.0 high speed cable	1	
Power cord ¹	1	
Software	1 CD	
User Guide	1	
96 well reaction plate	1 pack	
Optical sealing tape	1 pack	
Optical tape sealing applicator	1	

¹ Provided according to country standard

Specifications

Physical specifications	
Dimension	355mm(W) x 540mm(D) x 470mm(H) 13.98in(W) x 21.26in(D) x 18.50in(H)
Weight	39 kg (85.99lbs)
Sample capacity/ size	Opaque White 96-well Low Profile PCR Plate / 0.1ml Opaque White 8-Strip Low Profile PCR Tube
Sample volume	10~50 μl (20 μl recommended)
Power consumption	100-240VAC, 50/60Hz, Max 800VA
Operating temperature	15~30℃ (59~86°F)
Operating humidity	20~80%, no condensation
Thermo module specifications	·
Method of heating / cooling	Peltier
Temperature range	4.0℃~99.9℃(39.2~211.82°F)
Max ramp rate	5.0°C/sec (8.1°F/sec)
Temperature accuracy	±0.3°C (± 0.54°F)
Temperature uniformity	± 0.3°C (± 0.54°F)
Lid temperature	90 ~ 120℃ (194~248°F)
Gradient range	20 ~ 95°C (68 ~ 203°F)
Temperature differential range	1 ~ 20°C (1.8 ~ 36°F)
Temperature increment range	0.1~2.0°C (0.18~3.6°F)
Time increment range	1 sec ~ 60 sec
Ramp rate control range	1 ~ 100%
Computer specifications	
Operating system	Window7 (32-bit OS only)
Processor speed	Intel Dual Core E2160 (1.8GHz) or higher
Memory	1GB or higher
Communication port	USB 2.0 high speed
Screen resolution	1280 x 1024 or higher
Optical Part	•
Light source	Short arc lamp(120W)*
Sensor	16 bit 2D CCD
Excitation Filter / Emission Filter**	5 Set

* Continuously turning on and off the lamp reduces the lamp life span.

- * The lamp generates heat when it starts. Make sure that you turn off *Exicycler*[™] 96 Fast when cooling fan stops running. It usually takes about 3 minutes for cooling fan to stop.
- **Please refer to a chart below for more information about filter sets.

*The specifications of this product may change without notification for performance enhancement.

† Filter sets

Position	Excitation (nm)	Emission (nm)	Set	Fluorescent dye
1	Blank	Blank	1	_
2	475	530	1	FAM, SYBR Green I
3	520	560	1	JOE, TET
4	550	590	1	TAMRA, CY3
5	570	630	1	Texas Red, ROX, Red610
6	630	690	1	CY5, Red670

Chemical hazard: Exposure to following florescent dyes may cause eye and skin and respiratory tract irritation. Read the MSDS before use and follow the instructions if swallowed or inhaled. Wear appropriate protective eyewear, clothing, and gloves.

System Views



Installation and System Operation

Overview

To run *Exicycler*[™] 96 Fast Real-Time Quantitative Thermal Block, camera driver and operation software should be installed in a computer. When first installing the camera driver and operation software, or re-installing these components, please see below for instructions on how to install them.

Site Requirements

Exicycler[™] 96 Fast Real-Time Quantitative Thermal Block is for an indoor use. Ensure that the installation site:

- Meets the spatial and weight requirements.
- Meets environmental requirements.
- (The instrument) Is within 1.5 m (4.92 ft) of a 800VA power receptacle.
- (The computer) Is within 1.5 m (4.92 ft) of a 500VA power receptacle.
- Is away from water.

Required Materials

Scissors, pocket knife, or box cutter

Unpacking Exicycler™ 96 Fast

Save the packing materials and box in case you need to ship the instrument to Bioneer for service.

- 1) To unpack *Exicycler*[™] 96 Fast:
 - a) Cut the straps securing the instrument box.
 - b) Cut the tape securing the top flaps of the instrument crate, then open the flaps.
 - c) Remove *Exicycler*[™] 96 Fast accessories from the instrument and set them aside.
 - d) Lift and remove the cover from the instrument crate.
 - e) Remove the packing material from *Exicycler*[™] 96 Fast, and then inspect the instrument for shipping damage.

ACAUTION

If *Exicycler*[™] 96 Fast is damaged, note location and appearance of the damage, and then contact Bioneer Technical Support or your service representative.

- 2) Move *Exicycler*[™] 96 Fast to the desired installation site. Follow these guidelines for lifting and moving:
 - Make sure that you have a secure, comfortable grip.
 - Keep your spine in a neutral position.
 - Bend at the knees and lift with your legs.



- Do not lift and twist your torso at the same time.
- 3) Open the box containing *Exicycler*[™] 96 Fast accessories, then verify that it contains all the necessary components:
 - Refer to Component Lists.

Setting Up the Computer

Exicycler[™] 96 Fast Real-Time Quantitative Thermal Block operates through a computer. Therefore, to install *Exicycler*[™] 96 Fast, a computer or a laptop is necessary. Computer must meet the following requirements listed below. Please contact Bioneer Customer Service Center if you have any questions regarding installation.

Computer Requirements

- Intel Dual Core E2160 (1.8GHz) or higher
- Windows 7 Operating System for Korean or English Version (Service pack 1 or later, 32-bit OS only)
- 1.0GB RAM or higher
- 1280 * 1024 screen resolution
- USB 2.0 high speed port
- 20GB Hard disk drive minimum
- Microsoft Excel (Option)

For questions regarding problems with the computer or operating system, please contact the computer manufacturer.

- 1) The computer must have at least one communication port for USB data transfer.
- 2) It is recommended to install an anti-virus software in order for *Exicycler*[™] 96 Fast to operate safely.
 A firewall should also be setup to prevent unwanted information coming in from external networks.
 Please contact your IT department to setup anti-virus software and firewall.
- 3) It is not recommended to insert a flash drive into USB port when *Exicycler*[™] 96 Fast is running. It may cause a technical problem between *Exicycler*[™] 96 Fast and the computer.

Connecting the Computer and *Exicycler*[™] 96 Fast

There are main power connector and a communication port connector (USB) in the rear of *Exicycler*[™] 96 Fast. The computer should be turned off when connecting to *Exicycler*[™] 96 Fast to prevent any damages to the communication port. Please see below for instructions on how to connect *Exicycler*[™] 96 Fast to the computer.

- 1) Unpack *Exicycler*[™] 96 Fast and make sure all components are included.
- 2) *Exicycler*[™] 96 Fast must be installed in an area where it is not exposed to sunlight and must be set on a stable and level surface.
- 3) Set up the computer at the installation site.
- 4) Place *Exicycler*[™] 96 Fast in the installation site carefully.
- 5) Connect USB 2.0 cable to USB connector on the back of *Exicycler*[™] 96 Fast, then to the computer.
- 6) Connect power cable to *Exicycler*[™] 96 Fast, then to the receptable wall circuit.

Installing the Operation and Analysis Program

To run *Exicycler*[™] 96 Fast Real-Time Quantitative Thermal Block, the operation software and the camera driver must be installed in the computer. When installing the operation software and the camera driver for the first time, or re-installing these components, please see instructions below on how to install them yourself. In case of running the software for only data analysis purpose, please refer to this section for software installation.

IMPORTANT:

Do not turn on *Exicycler*[™] 96 Fast unless you have installed the Operation and Analysis Program and a camera driver. First install the Operation Software and then the camera driver.

To install Bioneer Package and Exicycler4 softwares for an *ExicyclerTM* 96 Fast device under Windows 7, follow the instructions below:

- If a previous version of software has been installed on your computer, please remove the programs and folders from the computer (Refer to 'Troubleshooting, 4. The Bioneer Package is not installed correctly'). Remaining program folders may cause errors during installation. This section is for the first time installation or re-installation of the software.
- The Bioneer Package has to be installed prior to installing Exicycler4 software. The procedures of Bioneer Package installation is described below.

Installing Bioneer Package



- Turn on the computer, but not *Exicycler*[™] 96 Fast Real-Time PCR machine. Place *Exicycler*[™] 96 Fast installation CD into the CD-ROM. Go to 'Bioneer Package' folder in the CD drive and run **Setup.exe**.
- To install Bioneer Package, click Next. The installation will proceed in C:₩Bioneer_Package.



If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed BioneerPackage. Click Finish to exit the wizard.

Kack Finish Cancel

< Back Install Cancel

Cancel

Click Install to begin the installation.

Setup Status

noving applications

2

The InstallShield Wizard is installing BioneerPackage

3) Enter desired name in the User Name box and Company Name box.

- 4) Select a setup type to install. **Complete** is recommended for installing all program features. **Custom** installation is recommended only for advanced users. Click **Next**.
- 5) InstallWizard is ready for installation. If you want to review or modify your settings, click **Back**. Click **Install** to start installation.
- 6) This process takes several minutes. Please do not cancel until installation is complete.

7) When installation is complete, please click **Finish** to finish installation Shield Wizard.



- 8) R program is also needed for *Exicycler*[™] software. If you click **OK**, installation will begin.
- 9) R program will be installed automatically. Please wait until installation is complete.

- 10) Click **OK** for installing R(D)COM interface.
- 11) R icon will be shown on the Desktop when installation is successful.
- 12) The folders shown here are created after installation has finished. Please confirm 'Bioneer_Package' and sub folders.

Installing .NET Framework 1.1 Package

🕒 🗢 📕 « Bio	oneer_Package > NET11 - 49 Sec
Organize 🔻 Inc	lude in library 👻 Share with 👻 Burn New
Computer Cost Co	kage
Microsoft .NET Framewor	k 1.1 Setup
🕐 Would you li	ke to install Microsoft .NET Framework 1.1 Package?
	Yes No
1号 Microsoft .NET Framew	vork 1.1 Setup
Microsoft	A copy of this license is available for printing at http://go.microsoft.com/fwliat/filiable12283). SUPPLEMENTAL END USER LICENSE AGREEMENT FOR MICPOCOEFT SOFTWARE There read, understood and agees to the terms of the family delivery and a gave and a copyed by clicking " agee" and proceeding to use this product.
	Install
Microsoft .NET Frames	work 1.1 Setup
Microsoft NET Frames	Ac opy of this loense is available for printing at http://go.microsoft.com/Walk/T.inkide/1223). SUPPLEMENTAL END USER LICENSE AGREEMEND VSER LICENSE AGREEMEND FOR MICROACHER and and agree to the terms of the End User License Agreement and so ignify by clicking "a agree" and proceeding to use this product. " agree C I go not agree
Microsoft	A copy of this license is available for printing at http://generation.onw/fulk/ite/12833/ SUPPLEMENTAL END USER LICENSE AGREEMENT FOR MUTCPOCONT SOCHTWARE
Microsoft NET Frames	Work 11 Setup
Microsoft NET Frames	work 11 Setup
Microsoft .NET Framew	Month 11 Setup Image: Control of the setup of the
Microsoft .NET Frames	work 11 Setup
Microsoft NET Frames	work 11 Setup
Microsoft NET Frames	Mork 11 Setup

- In order to install '.NET Framework 1.1 Package', run dotnetfx_eng.exe file of the C:₩Bioneer_Package₩Net11 folder.
- 2) Click Yes for installing '.NET Framework 1.1 Package'.
- 3) A setup window asking about the license agreement is displayed.

4) Select **I agree** to activate install button, Click **Install** to begin installation.

5) All components related to .Net Framework are being installed.

6) Installation of .NET Framework 1.1 is complete. Click **OK** to finish installation.

Installing Exicycler4 Software



1) In Exicycler4 folder of the provided CD, you can see **setup.exe** file and double click InstallSheild Wizard to install required items automatically.

2) Click **Next** and go to the next step.

3) Click **Install** to begin installation. If you want to change any settings or cancel installing, click **Back** or **Cancel**.

4) Please wait while InstallShield Wizard installs Exicycler4.

5) Message indicating "InstallShield has successfully installed Exicycler4." is shown. Click **Finish** to complete installation.



- 6) On the Desktop, these icons are created when installation is completed successfully.
- 7) In the C:₩Exicycler4₩Run folder, folders and files that are shown on the image (below) are created. Copy 'Calibration' folder from *Exicycler*[™] 96 Fast CD into C:₩Exicycler4₩Run folder.

BioneerPackage Setup	Computer > OS (C:) > Exicycler4 > Run > + 47 Search	h Run
Calibration	Organize Include in library Share with Burn New folder Include in library Share with Date modified Ty	≡ ▼ [
Exicycler4_Ver4.00.1 Manual OpenOffice	2 Computer ↓ CF 2/29/2016 3:37 PM Fill 4 GS (C:) ↓ CFM 2/29/2016 3:37 PM Fill b ↓ Apps TempProc 2/29/2016 3:37 PM Fill b ↓ Apps □ appFaramanil 8/21/2013 1000 AM XP b ↓ dell ↓ CabratonLine 8/21/2013 10:00 AM App b ↓ b& Drivers ↓ CopyCelibrat 8/21/2013 10:00 AM App	le folder le folder ML File ML File pplication extension pplication
		ML File pplication extension pplication extension

8) Now you should connect *Exicycler*TM 96 Fast system to a computer using provided USB cable.





Driver Software Installation	X
Device driver software was not successfully installed	
PCI-RDK in Transfer Mode XNo driver found (www.PlxTech.com)	
What can I do if my device did not install properly?	
	Close



- 9) Check the USB cable connection between the *Exicycler*[™]
 96 Fast and the computer.
- 10) Turn on *Exicycler*[™] 96 Fast. The status LED will be blue when the power is supplied properly.
- 11) Press the power button for a second to start selfdiagnosis. The status LED will start blinking in green after two short beeps when the self-diagnosis is complete.
- 12) When *Exicycler*[™] 96 Fast is turned on for the first time, the computer searches for a new device.
- 13) When an unsigned device is connected, the following message will be displayed. Click the message to view details.
- 14) This message appears because device driver software is not installed yet. Driver must be installed in order to continue. Please click **Close**.
- 15) To install device driver and to confirm device status, go to Control Panel₩System and Security₩System - Device manager.

File Action View Help	
As and the 171 cm (42	
A Shipheer-PC	
▶ 1 Computer	
Display adapters	
DVD/CD-ROM drives Dim Human Interface Devices	
De Carlo IDE ATA/ATAPI controllers	
Keyboards Mice and other pointing devices	
Monitors	
Other devices	
PCI-RDK in Transfer Mode (www.PixTech.com) Portable Devices	
Ports (COM & LPT)	
	3
Update Driver Software - PCI-RDK in Transfer Mode (www.PlxTech.com)	
How do you want to search for driver software?	
Search automatically for updated driver software	
Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.	II.
 Browse my computer for driver software Locate and install driver software manually. 	
Cancel	
	5
X	J
G I Update Driver Software - PCI-RDK in Transfer Mode (www.PlxTech.com)	
Browse for driver software on your computer	
Search for driver software in this location:	
Risinnes(2)(10)/(8)	
V Include subfolders	
hand of and a second to the second second second second second	
Let me pick from a list of device drivers on my computer This list will show installed driver software compatible with the device, and all driver	
software in the same category as the device.	
Next Cancel	
Net Carcel	
Rowse For Folder	
Browse For Folder	
Browse For Folder SS Select the folder that contains drivers for your hardware.	
Net Center Browse For Folder State Select the folder that contains drivers for your hardware. Select the folder that contains drivers for your hardware.	
Browse For Folder	
Next Center Browse For Folder \$23 Select the folder that contains drivers for your hardware. Image: Computer for your hardware. Image: Computer for the computer for your hardware. Image: Computer for the computer for your hardware.	
Net Center Browse For Folder £3 Select the folder that contains drivers for your hardware. ▲ ● ● Computer ▲ ● ● Computer ▲ ● ● ○ S (C:) ● ● ▲ ▲ ○ S (C:) ● ▲ ▲ ○ S (C:)	
Next Cancel Browse For Folder \$23 Select the folder that contains drivers for your hardware. \$24 Computer \$26 Computer \$26 So S (C:) \$Apps Bioneer, Package \$26	
Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer <	
Image: Select the folder State Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains dri	
Image: Computer Image: Computer	
Item Concert Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer </td <td></td>	
Net Center Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer <td></td>	
Net Center Browse For Folder State Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer	
Net Center Browse For Folder State Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer	
Browse For Folder State Select the folder that contains drivers for your hardware.	
Itel Center Browse For Folder State Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer	
Itel Concel Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer <td></td>	
Windows Security	
Item Concel Browse For Folder SS Select the folder that contains drivers for your hardware. Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: OS (C:) Image: Computer Image: OS (C:) Image: Computer Image: OS (C:) Image: Computer Image: Data of the computer Image: Computer Image: Data of the computer Image: Computer Image: Data of the computer Image: Computer Image: DX Technology, Inc. Palither Image: DX Technology, Inc. Image: Computer	
Item Connect Browse For Folder State Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer Image: PLX Technology, Inc. Image: PLX Technology, Inc.	
Itel Center Browse For Folder SX Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers OK Cancel Image: Select the folder that select the software? Name: PLX Technology, inc. Image: Select the folder that software for "PLX Technology, inc." Image: Always trust software for "PLX Technology, inc." Image: Dextingted the software for "PLX Technology, inc." Image: Dextingted the software for "PLX Technology, inc."	
Item Concel Browse For Folder State Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer Image: Comology: Inc: Image: Comology: In	
Item Connect Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer </td <td></td>	
Image: Computer Select the folder that contains drivers for your hardware. Image: Computer	
Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder that contains drivers for your hardware. Image: Select the folder this device software? Name PLX Technology, inc. Image: Nux software from "PLX Technology, Inc." Image: Nux software in safe to install Image: Nux software in safe to install	
Item Concel Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer <td></td>	
Item Concel Select the folder that contains drivers for your hardware. Computer Solocer OS (C:) Apps Bioneer_Package COM DRIVER NET20 NET35 Folder: DRIVER OK Cancel Windows Security X Woodwas Society X <td< td=""><td></td></td<>	
Item Concert Browse For Folder SX Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer </td <td></td>	
Item Exercise Browse For Folder SS Select the folder that contains drivers for your hardware. Image: Computer Image: Computer Image: Computer <	

- All devices connected to computer are displayed. Unsigned device is indicated with an exclamation mark. Point at this device and right-click and select Update driver software.
- 17) When a prompt searching for device driver is presented, select **Browse my computer for driver software**.

18) Click Browse to search for the appropriate driver software.

19) Select C: ₩Bioneer_Package₩driver and click OK.

- 20) Select Install. Installation will start automatically.
- 21) Please wait while installing. This process takes several minutes.



Exicycler 96 V4 4.0 Exicycler 96 V4 / Exicycler 96 V4 Fast Run 4.00.1

4 5 6 7 8 9 10 11 12

Ne Seta Are tel:

- 22) A message indicating that the installation is successful will show when installation is complete. Click **Close** to complete installation.
- 23) Open 'Device Manager' and confirm that device driver has been installed. If USB test devices (PLX)₩PLX'Transfer device' VID_0525&PID_1000) using Ncbulk.SYS has been installed properly, connected USB will be indicated.
- Click Run Exicycler4 icon to start ExicyclerTM 96 Fast software.
 - 25) You can see this screen when installation is completed successfully. The software version is also indicated.

26) Now you are ready to operate *Exicycler*[™] 96 Fast system.

Troubleshooting

1. Appropriate calibration data does not exist



E: Valibration		Ope
		Cop
		X
	- Anna	
Copy Com	p <mark>lete.</mark> Run E	xicycler

- CD provided with *Exicycler*[™] 96 Fast has Calibration data for each device. Calibration data have to be copied into C:₩Exicycler4₩Run folder in order for a normal function. If Calibration folder does not exist on this path, following message will be displayed.
- 2) Click **OK** to change the path.
- 3) You should assign the path of the Calibration folder to be copied automatically. Click **Open** and you will see the following browser.
- 4) After assigning the Calibration folder (ex. E: ₩Calibration), click OK.

- 5) Copy Calibration window displays the path of Calibration folder and serial number of your device. If the serial number matches with the connected *Exicycler[™]* 96 Fast system, click **Copy** button on the right hand side of window.
- 6) Please wait for a few minutes to complete.
- 7) When copying calibration folder is complete, click **OK** to finish the process. Please confirm the connection between device and computer, and restart Exicycler4 software.

2. The computer does not register *Exicycler*TM 96 Fast when launching 'Run Exicycler4' software.



This message means that the device is not turned on or the appropriate device driver has not yet been installed on the computer. If you see this message despite the instrument is turned on, then you should re-install the device driver to solve this problem. The driver installation steps are described in **'Installing Exicycler4 Software'** section.

3. An Error message is displayed when lunching 'Run Exicycler4' software.



This message indicates that '.NET Framework 1.1' has not yet been installed. Go to 'Installing.NET Framework 1.1 Package' section and re-install as described.

4. The Bioneer Package is not installed correctly.

If an incorrect installation was performed previously, 'Bioneer Package' may not be installed correctly. Go to Control Panel-Programs Add/Remove and remove 4 programs from the computer - 'Exicycler 96 V4 4.0', 'Bioneer package', 'R for windows 2.11.1' and 'R/Scilab(D)COM Server3.01-B5'. After removing them from the computer, repeat the entire installation process.

Control Panel Home View installed updates Turn Windows features on or	Uninstall or change a program To uninstall a program, select it from the list and then click Uninstall, Change, or Repair.				Control Panel Home View installed updates	Uninstall or change a program To uninstal a program, select it from the list and then click Uninstall, Change, or Repair.			
off	Organize - Uninstall Change		800 -		off	Organize 🕶 Uninstall Change Repair		10.	
	Name	Publisher	Installed On	Size *	1	Name	Publisher	Installed On	Size
	Adobe Flash Player 11 ActiveX	Adobe Systems Incorporated	3/12/2013	6		Adobe Flack Player 11 ActiveX	Adobe Systems Incomprated	3/12/2013	
	BioneerPackage	Bioneer	5/28/2013			18 BioneerPackage	Bioneer	5/28/2013	
	E Dell Backup and Recovery Manager	Dell Inc.	3/12/2013			E Dell Backup and Recovery Manager	Dell Inc.	3/12/2013	
	Dell Command Update	Dell Inc.	1/7/2015	51		Dell Command Update	Dell Inc.	1/7/2015	
	O Dell Data Protection Access	Dell Inc.	3/12/2013			Dell Data Protection Access	Dell Inc.	3/12/2013	
	Exicycler 96 V4 4.0	Bioneer	10/8/2015	1		弱 ^D Exicycler 96 V4 4.0	Bioneer	10/8/2015	
	1 ExiDiagnosis	Bioneer	3/12/2015	5		BEDiagnosis	Bioneer	3/12/2015	
	Intel(R) Network Connections 17.3.63.0	Intel	3/12/2013	1		Intel(R) Network Connections 17.3.63.0	Intel	3/12/2013	
	F Intel® Control Center	Intel Corporation	9/4/2014	1		E Intel® Control Center	Intel Corporation	9/4/2014	
	34 Intel® Graphics Driver	Intel Corporation	8/5/2015	2		Untel® Graphics Driver	Intel Corporation	8/5/2015	
	M Intel® Management Engine Components	Intel Corporation	9/4/2014	2		Management Engine Components	Intel Corporation	9/4/2014	
	Intel® Rapid Storage Technology	Intel Corporation	3/12/2013	1		Clintel® Rapid Storage Technology	Intel Corporation	3/12/2013	
	M Intel® SDK for OpenCL - CPU Only Runtime Package	Intel Corporation	9/4/2014			14 Intel® SDK for OpenCL - CPU Only Runtime Package	Intel Corporation	9/4/2014	
	34 Intel® USB 3.0 eXtensible Host Controller Driver	Intel Corporation	9/4/2014	1		M Intel® USB 3.0 eXtensible Host Controller Driver	Intel Corporation	9/4/2014	
	Maxim DL	Diffraction Limited	9/4/2014	1 +		Maxim DL	Diffraction Limited	9/4/2014	
🔗 e 📻 🕨 Control Panel 1	Bioneer Product version: 1.01 Help link: http://www.Bioner Programs + Programs and Features	Support link: http://www.f sr.com Size: 315 MB	ioneer.com	م	😧 🕞 o 📧 + Control Panel +	Bioneer Product version: 4.00.1 Help Init: http://www.Bione Programs -> Programs and Features	Support link: <u>http://www.</u> er.com Size: 39.0 MB	ioneer.com	
Control Panel I Control Panel Home View installed updates	Bioneer Product version 1.01 Help link: Mgr/www.Bione Program: + Programs and Features Uninstall or change a program To uninstall anguan, select from the list and them	Support link: http://www.l r.com Size: 315 MB	ioneer.com	م م	Control Panel + Control Panel Home View installed updates	Bioner Product version 4.00.1 Help link: http://www.Bione Programs + Programs and Features Uninstall or change a program To uninstall aprogram, select from the list and there	Support link: <u>http://www.d</u> er.com Size: 39.0 MB	and Features	
Control Panel I Control Panel Home View installed updates Turn Windows features on or off	Botter Product version 1.01 Hop link http://www.linee Propure: - Program and Feature: Uninstall or change a program To uninstall a program. Version the list and then Oparies - Uninstal	Support link: http://www.l r.com Size: 315 MB	ioneer.com	P	Control Panel Home Control Panel Home View installed updates View installed updates off	Roper Product version 4.01 Http://www.Bone Progens > Program and Feature Unistall or change a program To unistall or poper select if non the list and ther Organize + Unistall	Support link: <u>http://www.d</u> er.com Size: 39.0 MB	and Features	
Control Panel A Control Panel A Control Panel Home View installed updates Tum Vindows features on or off	Boter Product version 18 Hop las http://www.linear Pogams - Program and Factures Uninstall or change a program To uninstal a program, select it from the lat and then Opener - Uninstal	Support link: http://www.l r.com Sice: 315 MB	and Features	р р Спр А	Control Panel 4 Control Panel Home View installed updates Tun Windows features on or off	Boreer Product version 4.03 Help Init: http://www.Bione Programs > Programs and Fentures Uninstall or change a program To uninstal a program, steel it from the lat and the Organic = Uninstall New	Support link: http://www.d Size: 390 M8	and Features	
Control Panel I Control Panel Home View installed updates Jum Windows features on or off	Bioter Product version 1.01 Hep/Inte Mep/InterMe	Support link: http://www. size: 315 MB	ioneer.com and Features Installed On ana 2000000	P P Size ^	Control Panel Home Control Panel Home View installed updates Turn Windows features on or off	Roper Product version 4.03 Help faits http://www.Bione Programs > Programs and Features Uninstall or change a program To uninstall or program. Set it from the fait and ther Organize = Uninstall New Uninstall	Support links <u>http://www.k</u> site: 39.0 Md	and Features	Size
Control Panel Home Vere installed updates Turn Windows features on or off	Booer Product-resident SIX Hoppins: http://www.linear Programs: A Programs and Factures Uninstall or change a program. To unistall a program, select them the last and them Organize - Uninstall Hang Bioscard office	Support linit: http://www.b r.com Sice: 315 MB	and Features BE Installed On 3/12/2013 202/013	, p , p Size ^ 6	Central Panel Home Central Panel Home View installed updates The Windows features on or off	Boneer Product review 4.03 Help Init: http://www.Bone Programs > Program and Features Uninstall or change a program Ta uninstall or change a program Ta uninstall or change a program Ta uninstall or change a program Businest of the state of the state of the Oganize - Uninstall	Support Hole Inter/Course J Size 39.0 MB U4 4.9 Search Plagnom dick Uninstall, Change, or Repair. Publisher Microsoft Corporation	and Features	Size
Control Panel I Control Panel Home View installed updates Tum Windows features on or off	Botter Product version 1.01 Hep link: http://www.linxer. Program: + Program and Feture: Unitabili or change a program. To unitabili a program, sched ik finm the list and then Organize - Unitabili Hene: Monostil Office Monostil Office Monostil Office	Support Init: http://www. size: 315 MB	and Features	2 X X	Central Panel Home Central Panel Home Vera installed updates Turn Windows features on or off	Boreer Product version 4.03 Help link: http://www.Biroe Programs > Programs and Features Uninitial or change a program To uninitial a program, select 26 non the list and ther Organize = Uninitial Name Moreen Uninitial Second Office Significant Significant Significant Significant Second Office Significant Signif	Support links, <u>http://www.ik</u> Size: 39.0 Md Size: 39.0 Md Size: 39.0 Md Size: Si	inneet.com and Features Installed On 3/12/2013 3/12/2013	- C
Vew installed updates Vew installed updates Tum Windows features on or of	Boner Product-resident Life Hoppins: http://www.Boner Programs - Programs and Fastures Uninstall or change a program To uninalit argum setest from the list and then Ogenise - Uninstal Name	Support Init: http://www.k See: 325 MB • 4-9 Search Program click Uninstall, Change, or Repair. Publisher Microsoft Corporation Microsoft Corporation Microsoft Corporation	and Features	p p size c z j	Central Paral I in Control Paral I in Control Paral I in Control Paral I in The Control Paral I in Control P	Boner Product review 4.01 Holp Init: http://www.Bone Programs - Programs and Factures Uninstall or change a program. Ta unistal program. Heat Bone Heat I and Her Organize - Uninstall Norme Monosalt Dischool Monosalt Monosalt Dischool Monosalt Di	Support Hole Interactions Size 39.0 MB Use 39.0 MB data	Instance and Features	Size
Control Panel 4 Control Panel Home Verw installed updates Tum Windows features on or of	Boter Product version 18 Hop lask http://www.linear Programs - Programs and Faitures Uninstall or change a program. To uninstal a program, select is from the list and then Ogenes - Uninstall Marcent Office Microsoft SQL Server 2006 Compact Edition ((No)) Microsoft SQL Server 2006 Compact Edition ((No)) Microsoft SQL Server 2006 Compact Edition ((No))	Soppert Init- Mag//Annual er.com Size 315 MB	and Features	2 X 2 X 2 X 2 X 2 X 2 X 2 X 2 X	Centrol Panel Home Centrol Panel Home Wave netable godes Tom Windows features on or off	Boreer Product version 4.03 Help Init: http://www.Blone Programs & Programs and Fetures Uninstall or change a program Te uninstall or program, select it from the lat and the Organize Uninstall New Moreant Style Server 2000 Compact Edition (1981) Defected Wind Co. 2006 Editionale August	Support link: <u>http://www.ik</u> scr.com Size: 39.0 MB	Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013	Size
Control Panel I Control Panel Home Veni Instalfel update Aff	Boner Product restors LSI Hopkins: Mappins: Map	Support fails http://www. sccm Size 313 MB • ++ Secch Program elick Uninstell, Change, or Repair. Publisher Microsoft Corporation Microsoft Corporation Microsoft Corporation Microsoft Corporation	Incention and Features Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013	2 X 2 X 2 X 2 X 2 X 2 X 2 X 2 X	Control Panel + Control Panel Home View installed updates Turn Windows Fastures on or of	Boneer Product version 4.01 Help fait: http://www.Bone Programs > Programs and Factures Uninstall or change a program To unintial rogram, select from the list and ther Organiz = Uninstall Name Microsoft Stockget Microsoft Microso	Support link <u>intro/coursel</u> Size 39.0 MB • 49 Search Program dick Uninstall, Change, or Repart. Publisher Microsoft Corporation Microsoft Corporation Microsoft Corporation Microsoft Corporation	Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013	- Size
Control Panel I Control Panel Home Ven installed updates Ven installed updates difference on or df	Booler Product version 121 Help lask help (Investigence Help lask help (Investigence	Support bic http://www.dis. receim Size: 235.400	and Features	2 X 7	Central Pauel Norme Central Pauel Norme Vanis including dipates The including features on or off	Boneer Product review 4.03 Help Init: http://www.Blone Rogens > Programs and Fantures Uninstall or change a program To uninstall a program, sheet it from the list and ther Organics - Uninstall Moreant Mark - 2008 Additionable - 488.9.3. Moreant Mark - 2018 Modelmolable - 108.9. Moreant Mark - 2018.9	Support link: http://www.link. er.com Ser: 360.MB (int intervention) dick binistel, Change or Reprint dick binistel, Change or Reprint Mosett Coponstion Mosett Coponstion Mosett Coponstion Mosett Coponstion Mosett Coponstion	Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013	Size
Control Panel 4 Control Panel Home Verwinstated updates Tum Windows features on or off	Botter Product restors 121 Horp Init: March M	Support lock http://www. sccom See 233.Md etc. United (Change or Repair etc. United) (Change or Repair Research Corporation Moceeth Corporation Moceeth Corporation Moceeth Corporation Moceeth Corporation Moceeth Corporation	Inneer.com	2 x 7 2 x 7 2 x 7 3 x 7 4 x 7 7	Control Paul Home Control Paul Home View installed updres Tum Windows Fatures on or of	Boneer Product version 4.01 Help faits http://www.Bone Programs > Programs and Factures Uninistial or change a program To uninistial or change a program To uninistial or change a unit of the second secon	Support liek Inter/Jensel See 200 Million (14) Statistic Repairs disk Uninstat, Change or Repairs Addaher Redikher Monseth Carposotion Monseth Carposotion Monseth Carposotion Monseth Carposotion Monseth Carposotion Monseth Carposotion Monseth Carposotion	Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 6/1/2013 6/1/2013 6/1/2013 6/1/2013	- Size
Control Panel Control Panel Home Vers installed updates Turs Windows Fastures on or of	Booler Product version 121 Help lask help://www.linear Help lask help://www.linear Help lask help://www.linear Help lask help://www.linear Uninstall or change a program. To unistall angiogan, select them the lat and then Ogenize - Uninstal Mance Mancesh Visio C-2006 Angine Laboration Moncesh Visio C-2008 Angine Moncesh Visio C-2008 A	Support lock tetry/www. nccom See 213 Mill et al. Search Angewer click Uwinstell, Change of Repair. Maccael Corporation Maccael Corporation Maccael Corporation Maccael Corporation Maccael Corporation Maccael Corporation Maccael Corporation	Inneer.com and Features Installed On 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 312/014 61/2014	2 X 2 2 2 2 3 500 6 2 1 1 1 1 1	Control Panel In Contro	Boner Product resident 403 Help Init: http://www.Biner Programs > Program and Fastures Uninstall or change a program Ta uninstall or change a program Ta uninstall or change a program Ta uninstall or change a program To uninstall or change T	Support liek Inter/Jeneal exceen Size 323 Mill et al. Search Program cick Uninstat, Charge et Reprix Microarth Corporation Microarth Corporation Microarth Corporation Microarth Corporation Microarth Corporation Microarth Corporation Microarth Corporation Microarth Corporation	and Features Instelled On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2014 6/3/2013 6/3/2013	- Size
Control Panel + Control Panel + Control Panel Home Verse Installed updates. Turn Windows Faitures on or off	Botter Product version 1.11 Hep-time http://www.linee. Programs and Features United of the http://www.linee. United of the http://wwww.linee. United of the http://wwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwww	Support les tetty/week scole 33540	and Features and Features Installed On 31/2/0013 31/2/2013 31/2/2013 61/2013 31/2/2013 61/2013 61/2013 61/2013 61/2013 61/2013 61/2013	2 × 2 × 2 × 2 × 2 × 2 × 2 × 2 × 2 × 2 ×	Centrol Panel + Centrol Panel + Centrol Panel + Horne Centrol Panel Horne Vene including updates Turn Windows features on or off	Boreer Product works 403 Help Intel targe/www.Blood Help Intel targe/www.Blood Help Intel targe/www.Blood Help Intel targe/www.Blood Hongama and Feduree Uninstall or change a program Te uninstall or change a program Te uninstall or change a program Te uninstall or change a program Moreant Discover target a final or the lat and the Moreant Discover target a program Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat and the Moreant Discover target a final or the lat Moreant Discover target a final or the late Moreant Discover target a final or the lat Moreant Discover target a final	Second View Mark/Meesal Second View Mark/Meesal Second National Additional	and Features and Features installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013	Size
Control Panel 1 Control Panel Home Your installed updates Tum Windows Fatures on or of	Booler Product resider, 121 Help lask helps/www.Boole Programs + Rongema and Fastures Uninstall or change a program To unistall argum, select from the last and then Oprise + Deinstall Manee Oprise + Deinstall Manee Oprise - Deinstall Manee Moneent (See - 2018 defactorisation 488 83.) Elicotoxit (See - 2018 defactorisation 4888 83.) Elicotoxit (See - 20	Support liek Inter/veeman score See 213 Mill e e e Statut Angewee click Uwnstell, Change or Repair. Redakher Mocoeft Capatation Mocoeft Capatation	and Features and Features and Features 12/2/031 3/12/2013 3/12/2014 3/1	2 X	Cottor Panel Inne Cottor Panel Home View installed updates Turn Windows Fastures on or of	Boner Product review 403 Help Init: http://www.Blood Programs - Program and Fastures Uninstall or change a program To uninstal program, test it from the lat and the Ogmine - Uninstall Monoral Uning- Monor	Support liek tetter/venuel size 30.0 Million et al. Search Program edid binistell, Change of Repair Relative Publisher Research Corporation Microarth Corporation	Instance Instance 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 6/1/2013 6/1/2013 6/1/2013 6/1/2013	Size
Control Panel 1 Control Panel Home Vanis Installed updates Tom Windows Fastures on or off	Botter Product version 121 Help lais: http://www.linear Program: - Program: and Fatures Uninstall or change a program To uninstal a program, sheet it from the lot and then Gymene: - Uninstall Monosh thought Mo	Support lisk tegy/week secon Sec 233.00 citil Unintel, Change er Repaire Ansoek Corporation Moreard Corporation	and Festures and Festures and Festures and Festures and Zestures and Z) X ,) Size 6 ; 1 1 1 1 1 1 1 1	Central Panel Home Central Panel Home Verae natalied updates The natalied updates of	Boreer Product service 403 Help Init: http://www.Blood Help Init: http://www.Blood Help Init: http://www.Blood Help Init: http://www.Blood Hongama, she a program, Te uninstall a program, she it is from the ist and the Gogenice - Uninstall Moreant Studies - St	Support les Inter/const See 20 Million et al. Seech Argument et al. Change et Repair Addubientel, Change et Repair Addubientel Monaut Coposition Monaut Copo	and Features and Features Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 9/4/2014 6/3/2013 9/4/2014 5/12/2013	Size
Control Panel Control Panel Home Ven installed updates Tum Windows features on or of	Boster Product restrict, SII Hopkink: Mappink:	Support lok: http://www. sccom See 133.Md + 42 Statist Regions citik Uninstel, Change or Repair- Realsher Realsher Recent Corporation Microsoft Corporatio	Included Control of Co	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Cottor Parel Cottor Parel Home Vew installed updates Turn Windows Features on or of	Bones: Product revision 4.01 Help fait: http://www.Bines Programs -> Programs and Factures Uninstall or change a program. To uninstile argum, select faiton the list and ther Organize -> Donistal Name Microsoft Office Microsoft Off	Support liek Inter/Jeneral Size 202 Mill et al. Search Register fick Uninstat, Change or Reper- liek Uninstat, Change or Reper- Register Publisher Recent Coposition Moreath Coposition	Installed On 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2013 312/2014 57/2013 57/2014 57/2014 57/2014	- Size
Control Parel Control Parel Hone Vers installed updates Turn Windows Fadures on or of	Booler Product version 121 Help lask help (New More New New More New More New More New New More New More New More New Mo	Support liek Intro/veen See 213 Million (Internet See 213 Million) (Internet See	and Features and F	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Central Pauel Home Central Pauel Home Vere restated updates off	Dever Product review 4.03 Help Init: http://www.Blood Help Init: http://www.Blood Rogens: > Programs and Fatures Uninstall or change a program To uninstall a program, sheet it from the list and ther Organize - Uninstall or Company Moreant Most - 200 Additional or Additional Moreant Most - 2010 Moreant Mor	score score set the tetrachemic excern set 20 Million (1) Set 20 Million (2) Set 20 Milli	Instelled On 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 3/2/2013 9/4/2014 5/28/2014	Size
Control Panel 4 Control Panel Home Verse installed updates Tum Windows fastures on or off	Botter Product restrict 121 Horpins: Marguman and Feature Uninstall or change a program To uninstall or change a program To uninstall or change a program To uninstall or change a program Gunits - Uninstal Marea Gunits - Uninstal Gunits - Uninst	Support lois Inter/remail accom See 133 MB et al. Second Repairs et al. Second Repairs Read-Second Corporation Mocent Corporation Read-Second Corporation Read-Second Corporation Read-Second Corporation Read-Second Corporation Read-Second Corporation Mocent Corporation Read-Second Corporation Mocent Corporation Mocent Corporation	Included and Features Installed On 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 3122/013 914/2014 914/2014 914/2014 914/2014 914/2014 914/2014 914/2014	2 × 2	Control Pauel Information Control Pauel Home View retailed updates Turn Windows Fatures on or of	Boreer Product service 4.03 Help Init: http://www.likine Regems & Program and Falture Uninstall or change a program Te uninstall or change a program Te uninstall or service 8 from the list and ther Organize Uninstall Moreant Studies of the State of the State Moreant Studies (State of State Moreant Studies) Moreant Studies) Moreant Studies Moreant Studies Moreant Studies Moreant Studies Moreant Studies Moreant Studies Morganize Moreant Studies Moreant Stud	Copyon liek Inter/const. Copyon liek	Installed On 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 3/12/2013 5/12/2013 5/12/2013 5/12/2013 5/12/2013 5/12/2013 3/22/2013 3/22/2013	Size

Turning On and Self-diagnosis

- 1) Turn on *Exicycler*[™] 96 Fast by switching on the main power switch in the rear of the instrument. When power is supplied properly, a status LED turns blue.
- 2) Press the **POWER** button for a second to start self-diagnosis.
- 3) When the status LED is blinking green, you can either open or close a main door by pressing a **DOOR** button for a second. The status LED is blinking in purple when the door is open and is back to green when the door is closed.









Power Off

Power On

Door Open

Stanby

IMPORTANT:

The status LED starts blinking green after two short beeps when the self-diagnosis is complete. *Exicycler*[™] 96 Fast is now ready to operate. The status LED will turn red when the self-diagnosis fails or excessive physical shock is applied from outside. (e.g. Make sure that there are no objects placed in front of the door) Make sure that the status LED is blinking green before operating *Exicycler*[™] 96 Fast to prevent mis-operation or damage. A result of the self-diagnosis is provided under "ExiConfig".

℁ Status LED color

- a. Red: Error
- b. Blue: Standby
- c. Green: Ready for running
- d. Yellow: Self test
- e. Cyan: Running
- f. Purple: Door open
- g. White: Pause

NOTE:

You can stop the operation here and turn off the *Exicycler*[™] 96 Fast by pressing the POWER button for a second when it is blinking in green like Step 3.

Do not place any obstacle in front of the system and do not load a plate or take it out when the door is moving. It can cause serious damage and lead to severe injury.

Running Real-Time PCR Using Exicycler[™] 96 Fast Software

Starting 'Run Exicycler4' program



- Ensure that *Exicycler*[™] 96 Fast is in the "Standby" mode. The status LED must be blinking green. Double click **Run Exicycler4** icon on the desk top to start **Run** *Exicycler4*.
- 2) System Check window will pop up.

IMPORTANT:

The following error message will appear if $Exicycler^{TM}$ 96 Fast is not turned on. Turn on $Exicycler^{TM}$ 96 Fast by pressing the power switch at the back of $Exicycler^{TM}$ 96 Fast and the power button in front of $Exicycler^{TM}$ 96 Fast. Then double click **Run Exicycler4** icon on the desktop again.

IMPORTANT:

The following error message will appear when the calibration has not been performed for $Exicycler^{TM}$ 96 Fast or the calibration data is not present. Close Run Exicycler4 program and copy calibration folder into C:\#Exicycler4\#Run. (The CD provided with $Exicycler^{TM}$ 96 Fast has calibration data for each device.)

Calibration Inform E:\Calibration\	nation does not exist

Device is not ready, Please turn on.

3) The following window will appear when System Check is complete.



- a. **Menu** consists of File, Setup, Run, Window, and Help.
- b. **Experiment Information** displays file name, user name, and elapsed and estimated finish time.
- c. **Protocol Information** displays a cycling protocol in detail.
- d. Well information displays sample and probe specification for each well.
- e. **Temperature Profile** displays a temperature curve of the cycling protocol.


4) Go to **Setup > Probe** from the top menu.

IMPORTANT:

9 different probe options are available in *Exicycler*TM 96 Fast. Each probe option includes specifications for a fluorescence dye and a quencher. You can either select one of existing probe options in Probe List or add your own. Ensure you specify an appropriate probe option for accurate data analysis.



Cancel

- 5) Probe Information window will appear. Select one or click **Add** to add additional probe.
- * Additional Probe Setting: ex) Enter 'b-actin' in the field

NOTE:

OK

2

For example: In the **Dye** drop-down list of the **Add Probe** window, select **SYBR_Green**. Select **None** in the Quencher drop-down list. Select your desirable color for display and then click **OK**.





- 6) Check if your new probe is shown under the list, and then click **Save**.
- 7) Go to File > Design Experiment to design a new experiment.

8) Quick Start window will appear as shown below:



- a. Master, Protocol, and Plate: You can create, save, or open a file.
- b. User: Select or create the user name for personal account management.
- c. Protocol Information: Displays a cycling protocol in detail.
- d. Temperature Profile: Displays a temperate curve of the cycling protocol.
- e. **Protocol Setting:** Specifies protocol specifications such as temperature, time, and a number of cycles.

TaqMan probe

NOTE: Example of qPCR protocol

SYBR	Green I
01011	0100111

No.	Protocol	No.	Protocol
1 2 3 4 5 6 5 7	Incubate at 95.00°C, for 0:5:0 Incubate at 95.00°C, for 0:0:10 Incubate at 60.00°C, for 0:0:20 Scan Goto Line : 2, Cycle : 40 Melting 60°C to 94°C, Every 1.0°C, 1 Sec. Incubate at 25.00°C, for 0:1:30	1 2 3 4 5 6	Incubate at 95.00°C, for 0:5:0 Incubate at 95.00°C, for 0:0:10 Incubate at 60.00°C, for 0:0:20 Scan Goto Line : 2, Cycle : 40 Incubate at 25.00°C, for 0:1:30

9) Click **Incubate** tab and enter a temperature in the **Temperature** field and then a time in the **Time** field.



a. Incubate sets up a temperature and a time for the thermal block.

Time Increment sets up time increment per cycle.

Temperature Increment sets up temperature increment per cycle.

Ramping Rate reduces a ramping rate.

- b. Scan measures fluorescence signals emitted from samples.
- c. Goto specifies a starting step of a thermal cycling and a number of cycles.
- d. **Melting** sets up starting temperature and ending temperature for melting curve analysis to distinguish specific and nonspecific amplification products when SYBR Green is used for Real-Time PCR.
- e. Gradient is used to evaluate an optimum annealing temperature condition for amplification.
- f. Store keeps the 96-well thermal block at a set temperature until you stop *Exicycler*[™] 96 Fast. It is not recommended to use **Store** step when it is excessively humid.
- g. **Pause** is used to pause *Exicycler*[™] 96 Fast when it is necessary to check samples during experimentation. The door of *Exicycler*[™] 96 Fast will open when the **Pause** step is inserted in the protocol file. Click **Run** to resume the experiment.
- h. Hottop sets up a temperature for the heating lid.

NOTE:

Scan is used to detect fluorescence signals from samples. The fluorescence signals are measured while maintaining the temperature of the previous incubation step. If the **Scan** step is not included in the protocol file, a conventional PCR will be carried out without scanning fluorescence signals.

Melting sets up starting and ending temperature for melting curve analysis to distinguish specific and non-specific amplification products when SYBR Green is used for Real-Time PCR. Enter starting temperature in the **From** field, ending temperature in the **To** field, a temperature interval within a range of 0.1°C to 1.0°C in the **Between** field, and a hold time within a range of 1 second to 255 seconds in the **Hold Time** field.

Gradient is used to select an optimum annealing temperature for amplification and programs a temperature gradient up to 20°C across the rows of a sample block. Enter starting temperature in the **From** field, ending temperature in the **To** field, and time within a range of 1 second to 5 hours 59 minutes and 59 seconds in the **Time** field.

Store keeps the 96-well thermal block at a set temperature when thermal cycling is complete. The heated lid will start cooling down automatically. *Exicycler*TM 96 Fast will keep the main door closed and will maintain thermal block at the set temperature until you stop *Exicycler*TM 96 Fast. If the **Store** step is not inserted into the protocol file, the main door will open automatically when the thermal cycling is done.

Hottop Check Box sets up a temperature for the heating lid within a range of 90°C to 120°C. The default temperature is 105°C. When the check box is unselected, the heating lid will not be heated.



- 10) Click Append to add a new step into the protocol.
 - a. **Append** button is used when you want to add new steps into the protocol.
 - b. **Update** button is used when you want to make changes to a selected step.
 - c. **Delete** button is used when you want to delete a selected step from the protocol.
- 11) Click **Incubate** tab to add another Incubation step and then click **Append**. Repeat steps 9 through 10 if needed. (i.e. 94°C 30 sec / 55°C 30 sec / 72°C 30 sec).

NOTE:

To edit **Incubate** steps, click one of the steps in the **Protocol Information** window and edit. Click **Update** to change the protocol.



- 12) Click Scan tab and then Append.
- 13) Click **Goto** tab and select a starting step (i.e. "2") in the **Line** drop-down list. Enter a number of cycles (i.e. "40") in the **Cycle** field, and then click **Append**.

NOTE: Melting curve analysis

Melting curve analysis is an assessment of the dissociation-characteristics of double-stranded DNA during heating.

Append	d Care	Collects the flu	orescence	data at	each g	jiven temperatu
Update	Scan	steps.				
	🖏 Goto	<i></i>				
Delete	Melting	Temperatu	ire			
Hottop	🔝 Gradient	From 60) 🍨 °C	То	94	
105 💠	A Store		Betwe	en	1.0	÷ °C
	R Pause		Hold 1	Time	1	💠 Sec.
Append	Li Incubate					
Append	🖬 Incubate	Incubate the plat	e at the give	en temp	eratur	e and duration.
Append Update	La Incubate 호 Scan 형 Goto	Incubate the plat	e at the give	en temp	eratur	e and duration.
Append Update Delete	Incubate Scan Goto Melting	Incubate the plat Temperature Time(HiM:S)	e at the give	en temp 25. 1 – 3	eratur 0+	e and duration. °C
Append Update Delete Hottop	Li Incubate di Scan Si Goto Melting II Gradient	Incubate the plat Temperature Time(H:M:S)	e at the give	en temp 25. 1 - 3	eratur 0 🖈	e and duration. °C
Append Update Delete Hottop	Li Incubate i Scan i Goto i Melting I Gradient A Store	Incubate the plat Temperature Time(H:M:S)	e at the give $0 + \frac{1}{\sqrt{2}}$ ent	en temp 25. 1 1 3	eratur 0+ 0+	e and duration. •C Sec.

Ramping Rate

\$1.0 °C/Sec.

- 14) Click **Melting** tab to perform melting analysis. Enter starting temperature in the **From** filed (i.e. "60"), ending temperature in the **To** field (i.e. "94"), a temperature interval in the **Between** field (i.e. "1"), and a hold time in the **Hold Time** field (i.e. "1").
- 15) Click Append.
- 16) Click **Incubate** to add finish step (i.e. 25°C 1 min 30 sec) and then click **Append.**

NOTE:

The door of *Exicycler*TM 96 Fast will open automatically when a Real-Time PCR protocol does not include **Store** step. If **Store** step is included in the protocol, you must stop *Exicycler*TM 96 Fast by clicking **Stop** button in order to open the door. Otherwise, *Exicycler*TM 96 Fast will continue to store samples in the thermal block at the set temperature.

IMPORTANT:

To set the temperature on the Hot top Make sure that the Hottop check box is selected. The default value is set to 105 °C. If you turn off the Check box hot top is not heated.

Additional: Setting the temperature gradient mode

① Click Gradient tap, enter starting temperature in the From field, ending temperature in the To field.



(2) Press 'Gradient Calculator' button below the time setting window, and 'Gradient Calculator' window will appear. It will show predicted temperatures on each well.

Master C2 Pate Protocid C2 C2 C2 Plate C2 C2	Append Li trod Update Scan Delete Mater V Hottop II Grad 105 : A Stare	User Const Conce Conce and product the pink at the gradent therperature. The pink bits of the gradent therperature. The pink bits of the pink of	🖳 Gradient	Calculator	1				_ 1	laste		Ind		
	5 Parts		1	2	3	4	5	6	7	8	9	10	11	12
00- 00- 70- 70- 70- 70- 70- 70-			54.72	55.0	56.11	57.22	58.33	59.44	60.56	61.67	62.78	63.89	65.0	64.7

3 Click Append.



Master			1		
Protocol		test	R		
Plate	2		6		
No.	Protoco	í .			
i 1	Incubat	e at 94.00°C, for 0:10:0			
2	Incubat	e at 94.00°C, for 0:0:30			
🛺 З	Incubat	e at 55.00°C, for 0:0:30			
4	4 Incubate at 72.00°C, for 0:0:30				
i 5	5 Scan				
6	6 Goto Line : 2, Cycle : 35				
7	Melting	60°C to 94°C, Every 1.0°C, 1 Sec.			
18	Incubat	e at 25.00°C, for 0:1:30			

17) Enter a protocol file name in the **Protocol** field at the top left (i.e. "test") and then click 🛃 button to save the protocol.

NOTE:

Click 🖻 button from the Quick Start to open the saved Master, Protocol and Plate files when needed.

18) Once the protocol is saved, click **Plate** tab to create a plate file. Plate window will appear as follows:



- a. 96-well plate position specifies well locations for samples.
- b. Name/Count/Probe displays a name and probe information for each sample.
- c. **Probe Name/Flu. Dye/Quencher/Type/Concentration** specifies a name, a fluorescence dye, a quencher dye, a type, and a concentration for each sample.
- d. Protocol/Plate tab switches between the Protocol Information and the Plate Information windows.
- e. Sample Name enters a sample name.
 Assign specifies the information of each well such as probe and type.
 Add Probe adds the probe to be used in experiment.

NOTE:

Ensure that you specify appropriate information (i.e. probe set up and sample type) for each well before running experiment in order to generate accurate data.

19) Click Add Probe, the Add Probe window will appear.



20) Select appropriate probes, and then click **OK**.



- a. **Probe Name**: displays probe name assigned by the user.
- b. Fluorescent Dye: displays name of a fluorescence dye assigned by the user.
- c. **Quencher:** displays name of a quencher assigned by the user.
- 21) The probe is loaded and shown as follows:



22) Select wells from the 96-well plate diagram.



NOTE:

Use the left mouse button when selecting a single well. When selecting a range of cells, click the first cell in the range, and then drag to the last cell. You can also select cells in a row or column by pressing CTRL and clicking the row or column heading. To select all cells in 96-well plate, click the cell at the top left corner of the diagram.

23) Click the probe option cell and then select **STD** in the **Type** drop-down list. Select the check box of **Probe Name** and then click **Assign**.



- a. Sample represents unknown samples.
- b. **STD** stands for a standard sample of a known concentration.
- c. NTC stands for No Template Control and is a sample without a template.
- d. IPC stands for Internal Positive Control and is a sample that monitors the PCR run during Existence / Non-existence reaction. It will also diagnose cause of the negative result from PCR.
- e. IPC- is a sample that is used as a template and contains a reagent to prevent the IPC reaction during Existence / Nonexistence reaction. IPC- is not amplified during the Real-Time PCR.
- 24) For example, Click well D3 and enter '1000000' for a concentration of 10⁶-copy and then click **Assign**. Repeat this for wells D4 through D8 with concentrations of serial diluted standards.



25) Select wells E3 through E8 in the plate diagram. Select **Sample** in the **Type** drop-down list, and the click **Assign**.



26) Select cells D3 through E8 and enter a sample name in the **Sample Name** field. Click **Sample Name** to save sample name.

A Quick Start	User Guest	Cancel	
	No. Card Adap 1 0.0	Store were a first of the second seco	Sample Name

27) Verify information on each well in the Name/Count/Probe window.



- 28) Enter a plate name in the **Plate** field (i.e. Test) and then click 😡 button to save the plate file.
- 29) The protocol file and plate file are saved. Enter a master file name in the **Master** field (i.e. Test) and then click 😡 button to save the master file.

Master test 20 2 Protocol test 20 2 Plate test 20 2	User Guest Con	-	User	Guest	ок
Income at \$150°C, for 5.0 Income at \$150°C, for 6.150 Income at \$150°C, for 6.150	Area Bandle Dr. (g) and star goes strapend on the data Math Bandle Dr. (g) and strapend on				Cancel
90- 80- 70-			Quick Start		
60- 50- 40-			Master	test	🖻 😡
30			Protocol	test	🔂 🔂
10-1	¹⁰		Plate	test	🔂 🔂
Protocol Plate					

NOTE:

Save the master file, the protocol file, and the plate file by clicking 😡 button. You can open the saved master file by clicking 🍃 button from Quick Start menu. The master file includes both protocol and plate file.



30) Click **OK** at the top right corner. Go back to the main window.



- 31) Ensure the status LED in front of the *Exicycler*[™] 96 Fast is blinking green.
- 32) Press the **DOOR** button for a full second to open the door. Load the 96-well plate with A1 positioned at top-left corner of the block.
- 33) Verify the master file and go to **Run > Run** from the top menu bar or click the **Run** button.



Dataname	
Please input the dataname t	o save the result.
Sample AQ	
(

💕 Exicycler4 Run	
File Setup	Run Help
	🕨 Run
	() Pause
	Stop

34) Enter a data name (i.e.Sample_AQ) in the **Dataname** window and click **Ok**. If you do not enter the data name, default name will be used.

35) The following three message boxes will appear in the following order.



- a. This message will appear when closing the door of the *Exicycler*[™] 96 Fast.
- b. This message will appear when the lamp condition is being checked.
- c. This message will appear during lamp ignition.
- d. This message will appear when lamp is turned on and initialization of *Exicycler*[™] 96 Fast.
- 36) The main window will appear when the progress bar finishes without any problems.



- a. Scan window displays a curve of amplification in real time during PCR.
- b. **Melting** windows displays a melting curve in real time when the melting step is included in the protocol file.
- c. Temperature Profile displays a temperature profile and in real time.
- d. Experiment Information displays information of the current experiment.
- e. Protocol Information indicates current progress of the experiment.
- f. Well Information displays details of each well when selecting either Probe or Type in the Graph Color Setting drop-down list. To display the curve of amplification, select a well from 96-well plate diagram and click the check box from the probe option.



- 37) Go to **Run > Stop** to stop *Exicycler*[™] 96 Fast or click **Stop** button.
- 38) Go to Run > Pause to pause Exicycler[™] 96 Fast or click Pause button.

IMPORTANT:

If the pop up window remains more than 5 minutes after running $Exicycler^{TM}$ 96 Fast or if the temperature profile does not display anything in the main window, turn off $Exicycler^{TM}$ 96 Fast and turn it on again. Start **Run Exicycler4** again and run $Exicycler^{TM}$ 96 Fast again. If the same error keeps occurring, please contact us for customer service.

IMPORTANT:

It is recommended to re-start *Exicycler*[™] 96 Fast at least 10 minutes after the previous Real-Time PCR run has finished. Continuous operation without a break will reduce the lamp life span and cause errors.

NOTE:

Do not turn off *Exicycler*[™] 96 Fast while the heating lid is warming up. While the lid is heated to the set temperature, 96-well block maintains at 25°C. The thermal cycling will start when the heating lid reaches set temperature and the lamp is stabilized.

NOTE:

*.ex3 file is created under a folder designated by the user after the experiment is complete. The user can analyze the *.ex3 file using *Exicycler*[™] 96 Fast Analysis Program to generate analysis data. Please refer to **Analyzing Data using Analysis Program** for data analysis.

Reagents and Consumable Products

Various reagents and kits are required to perform a Real-Time PCR in *Exicycler*[™] 96 Fast Real-Time Quantitative Thermal Block. Please refer to this section to obtain detailed information about the appropriate reagents and kits for your experiments. For ordering, please go to the 71 page, **Ordering Information**.

PCR MasterMix kit

AccuPower[®] 2X Greenstar[™] qPCR MasterMix allows an easy and fast amplification in *Exicycler*[™] 96 Fast. AccuPower[®] 2X Greenstar[™] qPCR MasterMix consists of Sybr[®] Green I fluorescent dye, DNA polymerase, and necessary qPCR components.

Optical 0.1 ml low profile 8-strip tube and 96-well low profile plate

You must use an optical tube or a plate when performing Real-Time Quantitative PCR in *Exicycler*TM 96 Fast. A standard tube or a plate can be also used, but only for a conventional PCR without fluorescent dyes.



Optical sealing tape

Seal up the optical tubes or plates tightly with the optical sealing tape for fluorescence detection. The sealing tape is available in the size of 96-well low profile plate. Therefore, cut up the sealing tape when using 0.1 ml low profile 8-strip tubes.



You must cut up the sealing tape with a box cutter, not scissors. The tape adhesive can be carried over to the surface of sealing tape when cutting up the tape with scissors. This will make the tubes stick to the heating lid of $Exicycler^{TM}$ 96 Fast. Tubes stuck to the lid will drop inside $Exicy/cer^{TM}$ 96 Fast when the lid is cooled down. Using at least 2 strips of 8-strip tubes at a time is recommended to prevent this error.

Marning Chemical hazard:

AccuPower[®] 2X Greenstar[™] MasterMix may cause eye and skin irritation, and respiratory tract irritation. Read MSDS before use and follow the instructions if swallowed or inhaled. Wear appropriate protective eyewear, clothing, and gloves. Performance Maintenance

Performing System Diagnosis using ExiCfg



1) Turn on *Exicycler*[™] 96 Fast by pressing the **POWER** button.

2) Go to 'C:₩Exicycler4WRun' and double click **ExiCfg.exe** to start the program.

3) Go to Information > Self Test.

NOTE:

💰 Exicycler4 Config

Information Calibration

Machine Information Lamp Status Error Log Self Test Exit FactorySet

'USB Communication is NOT initialized' message box will pop up if *Exicycler*[™] 96 Fast is turned off or if the cable connection between *Exicycler*[™] 96 Fast and the computer is not firmly connected.

	Start
Door Motor	
Bath Motor	
Excitation Motor	
Emission Motor	
Lamp Fan	
Sensor	
Peltier Heating	
Peltier Cooling	
Hot lid	
Rath Fan	

4) Click Start in the Self Test window.

IMPORTANT:

Make sure that there are no objects placed in front of the door while performing Self Test.



5) **OK** signs will show up in green, when all of the selfdiagnosis tests pass completely without any problems.

NOTE:

Self-diagnosis is complete with two short beeps.



6) When any of the self-diagnosis tests fail, **NG** signs will appear in red.

NOTE:

Any problems caused during self-diagonsis are recorded in 'Error log'.

7) Go to Information>Error Log from the top menu bar to see the problems.



Guide to AccuPower[®] Fluorescence test kit for calibration

Prepare to perform the calibration with a Fluorescence test kit. The Fluorescence test kit is designed for $Exicycler^{TM}$ 96 Fast Real-Time Quantitative Thermal Block. Therefore, it is not applicable to other Real-Time instruments. The Fluorescence test kit is comprised of 11 plates, a mask fluorescence test plate, a background fluorescence test plate, multi-channel fluorescence test plates (9 different optical Fluorescence test plates of filter sets) present in $Exicycler^{TM}$ 96 Fast. The Fluorescence test kit is available for reuse up to 3 times. For more information about the Fluorescence test kit, please see the following:

Before Starting Calibration with the Fluorescence test kit

Centrifuge, Disposable plastic gloves, *AccuPower*[®] Fluorescence test kit for *Exicycler*[™] 96 Fast (A-2060-A2)

Fluorescence test plate preparation

The Fluorescence test kit is shipped refrigerated or frozen and must be stored in the freezer upon receipt. Retrieve one Fluorescence test kit right before starting the calibration.



1) Take out the Fluorescence test kit from the freezer.



- 2) Take out a sealed packs in the Fluorescence test kit.
- 3) Allow the pack to thaw in room temperature for at least 10 minutes.
- 4) Take out a Fluorescence test plate from its packaging.

IMPORTANT:

Pay particular attention to the Fluorescence test kit when handling. Wear disposable plastic gloves

to prevent contamination on the sealing tape covering 96-well plate. Wipe the surface of the plate with 70% ethanol when it needs to be cleaned.

NOTE:

Do not vortex the Fluorescence test plate. A small amount of Fluorescence test solution is pre-aliquoted in each well, and it may be lost while vortexing.



5) Place the Fluorescence test plate in a rack and centrifuge for 5 minutes.

NOTE:

It is important to centrifuge the Fluorescence test kit prior to use. This will spin down remains of fluorescence dye on the side of the well and to remove air bubbles at the bottom of the well.



- 6) Protect the Fluorescence test plate from direct sunlight after centrifugation. Place the plate directly into *Exicycler*[™] 96 Fast.
- 7) Put the Fluorescence test kit back into its packaging and return it to the freezer when the calibration is done.

IMPORTANT:

The Fluorescence test kit contains photosensitive components. Keep the Fluorescence test kit away from light during calibration. Put the Fluorescence test plate back into its packaging right away for reuse.

Calibration using ExiCfg

The calibration must be performed prior to operating *Exicycler*TM 96 Fast Real-Time Quantitative Thermal Block. You can either transfer proper calibration data associated with a serial number from the installation CD to the computer or perform the calibration yourself. Install the Operation and Analysis Software for the calibration data transfer to the computer. For a reliable operation of the *Exicycler*TM 96 Fast, calibrating *Exicycler*TM 96 Fast with a Fluorescence test kit is recommended. Calibration must be done when moving *Exicycler*TM 96 Fast to a different location or when changing a light source lamp. A periodical calibration of every 6 months helps to maintain the optimum condition of *Exicycler*TM 96 Fast. Use the ExiCfg program to calibrate *Exicycler*TM 96 Fast. The ExiCfg calibrates as well as diagnosessystemical condition of *Exicycler*TM 96 Fast. Make sure that you are fully trained for handling the ExiCfg before starting calibration. Otherwise, authorized staff is only allowed to manage the ExiCfg. Mis-use of the ExiCfg by unauthorized staff may cause serious damage to *Exicycler*TM 96 Fast. The calibration is carried out in 4 steps, Warming up the lamp > Mask calibration > Background calibration > Multi-Channel calibration.

Mask Calibration



1) Turn on *Exicycler*[™] 96 Fast by pressing the **POWER** button.

NOTE:

Make sure the status LED is blinking green after the self-diagnosis prior to starting the Calibration.



 Go to 'C:₩Exicycler4₩Run' and double click ExiCfg.exe.



3) Click **Lamp warming** to turn on the lamp. A progress bar of the **Lamp warming** will start right after 'The lamp is turned on' message appears on the 'History' box. Do not click any buttons until the progress bar finishes.

IMPORTANT:

It usually takes about 30 seconds for the message 'The lamp is turned on' to appear on the 'History' box. If the message does not appear in 3 minutes, turn off *Exicycler*[™] 96 Fast and turn it on again after 5 seconds. In case of an abnormal shutdown like this, wait about 3 minutes, then click **Lamp warming** to turn on the lamp again. It takes approximately 10 minutes to reach the maximum light intensity there after. Therefore, wait until the progress bar of the **Lamp warming** finishes before proceeding further.



4) Press the **DOOR** button to open the door.

- 5) Place the Mask Fluorescence test plate on the block.

NOTE:

You must perform the Mask Calibration test prior to any other calibrations.

IMPORTANT:

It is important to load the Fluorescence test plate in the right position. A misplaced plate may cause damage or technical problems.



NOTE:

The Calibration time is approximately 10 minutes depending on the condition of *Exicycler*[™] 96 Fast and the computer.



9) When the Mask Calibration is complete, click **OK**.

NOTE:

The door will open when the Mask Calibration is successfully completed. Put the plate back into its packaging and return it to the freezer.

Marning High temperature

Wait at least 5 seconds before taking out the Fluorescence test plate from the 96-well block. The Fluorescence test plate is heated to a temperature of 100°C and may cause a burn.



Calented Intercales	History
	Capture Exposure(3):413 Calced Level : 49004 at the exposure of 413m5
Hush Californian	Intern 1 & Detected Systems 74.07 Detected Exposure 414 Capture Exposure (4) 300 Capture Exposure (4) 374 Capture Exposure (4) 374
astgrund Giltintun	Calcol Level 1 46895 at the exposure of 41246 Save 1 0.0006423070022077 Detected Exposure 412 Carture Exposure 412 Carture Exposure 412 150
uti-Osenel Gilbraton	Capture Experience(3):421 Capture Experienc(3):421 Calcod Level : #4064 at the exposure of 421mS Start : 0.00015948275042000 DataCod Resource:422

10) Click Close in the 'Mask Calibration' window.

11) The 'Mask Calibration' frame will turn blue when the Mask Calibration is completed.

Background Calibration



1) Press the **DOOR** button to open the door.

NOTE:

This step is omissible when performing the Background Calibration followed by the Mask Calibration.



2) Place the Background Fluorescence test plate on the block.

IMPORTANT:

It is important to load the Fluorescence test plate in the right position. A misplaced plate may cause damage or technical problems.



3) Click Background Calibration button.

4) Click **Start** in the 'Background Calibration' window.

NOTE:

The Background Calibration takes approximately 10 minutes depending on the condition of *Exicycler*[™] 96 Fast.



5) When the Background Calibration is complete, click OK.

NOTE:

The door will open when the Background Calibration is successfully complete. Put the plate back into its packaging and return it to the freezer.

Marning High temperature

Wait at least 5 seconds before taking out the Fluorescence test plate from the 96-well block. The Fluorescence test plate is heated to a temperature of 100°C and may cause a burn.



	Calibrated International Net calibrate	History
Lang summing		ik Calibration complete. Ikground Capture F1 at Exposure 1
Mask Calibration	0 ac 8 ac 8 ac	Aground Capture F1 at Exposure 2 Aground Capture F1 at Exposure 3 Aground Capture F2 at Exposure 1
	Bac Bac	Aground Capture F2 at Exposure 2 Aground Capture F2 at Exposure 3 Aground Capture F2 at Exposure 1
Background Calibration	liac Bac	Aground Capture F3 at Exposure 2 Aground Capture F3 at Exposure 3
	Bac Bac	signund Capture F4 at Exposure 2 Signund Capture F4 at Exposure 3
Multi-Channel Calibration	Hac	kground Capture FS at Exposure 1

6) Click **Close** in the 'Background Calibration' window.

7) The 'Background Calibration' frame will turn blue when the calibration is completed.

Multi-channel Calibration



1) Press the **DOOR** button to open the door.

NOTE:

This step is omissible when performing the Background Calibration followed by the Mask Calibration.

	Calibrated Not calibrate	History	
naming		Mask Calibration complete.	1 1000
-		Background Capture F1 at Exp	men 2
- Alterna		Background Capture F1 at Expe	oure 3
		Rackground Capture F2 at Expe Rackground Capture F2 at Expe	isure 3 Isure 3
		Background Capture F2 at Exp	C even
		Background Capture F3 at Expe	nure 1
nd Calibration		Background Capture F3 at Exp	men 3
		Background Capture F4 at Expe	oure 1
_		Background Capture F4 at Exp	mre 2
and Californian		Background Capture F5 at Expe	sure 1
ALC LEURING		Background Capiture FS at Expe	mara 2
_		Backenned Calibration consist	
No	Nome	J [_
No.	Name		
No. 01	Name FAM		
No. 01 02	Name ✓ FAM ✓ SYBR_GREEN		
No. 01 02 03	Name ✓ FAM ✓ SYBR_GREEN ✓ JOE		
No. 01 02 03 04	Name ✓ FAM ✓ SYBR_GREEN ✓ JOE ✓ TET		
No. 01 02 03 04 05	Name ☑ FAM ☑ SYBR_GREEN ☑ JOE ☑ TET ☑ TAMRA		
No. 01 02 03 04 05 06	Name FAM SYBR_GREEN JOE TET TAMRA CY3		
No. 01 02 03 04 05 06 07	Name ✓ FAM ✓ SYBR_GREEN ✓ JOE ✓ TET ✓ TAMRA ✓ CY3 ✓ TEXAS_RED		
No. 01 02 03 04 05 06 07 08	Name FAM SYBR_GREEN JOE TET TAMRA CY3 TEXAS_RED ROX		

2) Click Multi-Channel Calibration button.

3) Select fluorescence dyes in the 'Multi-Channel Calibration' window for the Calibration.

NOTE:

9 dyes are available for calibration.

NOTE:

For a selective multi-channel calibration of your desirable dyes, select check boxes of the dyes.





4) Click Start.

 Prepare the Multi-Channel Fluorescence Test plate with a dye X (i.e. "FAM") when 'Attach the plate named 'X' (i.e. "FAM") on the bath' message appears.

6) Place the Multi-Channel Fluorescence Test plate on the block.

IMPORTANT:

It is important to load the Fluorescence Test plate in the right position. A misplaced plate may cause damage or technical problems.



- 7) Click **Yes** in the 'Confirm' window.
- 8) The door will open when the Calibration is successfully complete.

NOTE:

An approximate calibration time for each dye is 5 minutes.

NOTE:

Put the plate back into its packaging and return it to the freezer.

Marning High temperature

Wait at least 5 seconds before taking out the Fluorescence test plate from the 96-well block. The Fluorescence test plate is heated to a temperature of 100°C and may cause a burn.

A	ttach the pla	te named "	SYBR_GREEN	" on the	
bath.					
Continue		Add Dwo	ľ.	Close	
_	Contailer 2				
No.	Name		Status		
01	FAM		100%5		
02	SYBR_GREEN		096		
03	30E		095		
04	TET S		0%6		
05	TAMRA		0%6		
06	CY3		0%		
07	TEXAS_RED		0%6		
08	ROX		096		
90	2 CYS		096		

Attach the plate named " CY5 " on the bath

Attach the plate named " CY5 " on the bath

Add I

OK

Those

105%5

19935

 No.
 FAM

 01
 Ø FAM

 02
 Ø SYBI

 03
 Ø JOE

 04
 TET

 05
 TAM

 06
 CY3

 07
 TEX.

 08
 ROX

 09
 CY5

 No.
 Name

 01.
 ✓ FAM

 02.
 ✓ SYBR_GREEN

 03.
 ✓ DOE

 04.
 ✓ TET

 05.
 ✓ TAMRA

 06.
 ✓ CY3

 07.
 ✓ TEXAS_RED

 08.
 ✓ ROX

 09.
 ✓ CY5

- Prepare the Fluorescence Test plate with a dye X (i.e. "SYBR Green") when 'Attach the plate named 'X' (i.e. "SYBR Green") on the bath' message appears.
- 10) Click Continue to repeat step 9.
- 11) When the Multi-channel Calibration is complete, click OK.

12) Click Close in the 'Multi-Channel Calibration' window.

13) The 'Multi-Channel Calibration' frame will turn blue when the Calibration is completed.



FactorySet

Calibrated

rmation Calibration

Mask Calibration

Machine Information Lamp Status

Error Log Self Test Exit

- 14) Go to Calibration>Test Function>Lamp Off from the top menu bar.
- 15) Go to **Information>Exit** from the top menu bar to close ExiCfg program.

IMPORTANT:

Wait at least 3 minutes to switch off main power of *Exicycler*TM 96 Fast. The cooling fan will continue to run to cool down the lamp. Shutting down *Exicycler*TM 96 Fast before cooling down the lamp will reduce the lamp life span.



- 16) Turn off *Exicycler*[™] 96 Fast by pressing the **POWER** button.
- 17) Turn off *Exicycler*[™] 96 Fast using the main power switch located at the back of *Exicycler*[™] 96 Fast.

Main POWER switch

Cleaning the main body

Note:

- Turn off *Exicycler*TM 96 Fast Real-time Quantitative Thermal Block, then remove the power cord.
- Allow the instrument to cool until the bath block reach room temperature.

Cleaning the Block Wells

If you use any cleaning or decontamination method, except those recommended in the manual, you risk damaging the Instrument. Clean the block wells once a weekly or as needed.

Always wear protective glasses and gloves when servicing the instrument. Also, make sure you disconnect the instrument from power cord before you begin any service procedure.

During instrument operation, the temperature of the bath block can be as high as 100°C. Before performing the procedure, keep hands away until the bath block reach room temperature.

To clean the block wells:

- 1) Open the Front door.
- 2) Remove the sample from the bath block and set it aside.
- 3) Use a cotton swab soaked in pure isopropyl alcohol or DNA Zap to clean the wells thoroughly. Make certain that the isopropyl alcohol or DNA Zap has evaporated completely before reloading a sample tray.

WARNING CHEMICAL HAZARD

Isopropyl alcohol is a flammable liquid and vapor. Exposure may cause eye, skin, and upper respiratory tract irritation. Prolonged or repeated contact may dry skin and cause irritation.

Exposure may cause central nervous system effects such as drowsiness, dizziness, and headache. Read the MSDS, and follow the handling instructions.

Remove any remaining isopropyl alcohol from the cover.

Note:

If the platen becomes contaminated with amplified DNA, raise the hot-top cover to a cleaning position, wipe the platen with a cloth or cotton swab soaked in bleach, then rinse with water.

- 1) Clean the heated platen once a month or as needed.
- 2) If the hot-top cover becomes contaminated with amplified DNA, raise the hot-top cover to a cleaning position. Wipe the cover with a cloth swab soaked in Isopropyl alcohol or DNA zap, then wipe the cover with a damp cloth.

Precautions for PCR tube loading

Do not put a tube column bias one if you experiment with PCR Strip tube. This can be caused by a phenomenon in skewing the Hot Lid cause evaporation of such samples, equipment failure. So please put the empty tube to balance the opposite direction. Please also well positioned for insertion into the correct PCR tube. If Tube is inserted incorrectly can not get the normal data, in this case, you must do the experiment again.

Sample

Empty tube



PCR tube balancing



Correctly located strip tube



Incorrectly located strip tubetube

Replacing Fuses

The instrument has two 250V, F10AL and $5\times$ 20mm fuses.

Required Materials

- Two 250V, F10AL and 5×20mm fuses
- Small screw-driver(-)

Procedure

1) Turn off the instrument and disconnect the power cord from the back of *Exicycler*[™] 96 Fast.

A DANGER ELECTRICAL SHOCK HAZARD

Severe electrical shock, which could cause physical injury or death, can result from working on an instrument with high voltage power supply. To avoid electrical shock, disconnect the power supply to the instrument, unplug the power cord, and wait at least 1 minute before working on the instrument.



2) Insert a small screw-driver(-) into the slot in the upper portion of the power entry module, and open the fuse door.



3) Pull out the fuse compartment to inspect the two fuses in the fuse compartment.





- 4) Pull out the blown fuse(s) from the fuse compartment and replace with new 250V, F10AL, 5×20mm fuses.
- 5) Place the fuse compartment back into the power entry module and close the fuse door.
- 6) Press the fuse door until it locks in place.
- 7) Connect the instrument power cord.

Returning *Exicycler*[™] 96 Fast for Service

1) Decontaminate the instrument.

If the bath block became contaminated with radioactivity, use a commercially available decontaminant to remove the contamination. If the block is not decontaminated, the instrument cannot be returned to Bioneer for service.

- 2) Complete certification for instrument decontamination.
- 3) Fax or e-mail (<u>exicycler-support@bioneer.com</u>) the service request form to the customer center.
- 4) Pack the instrument in the provided packaging, without any accessories or power cords. Include service request form in the box.

Note:

Request for instruments repair without the service request form can lead to delayed in service.

5) Affix the provided postage to the box, then ship the instrument to the designated facility. The repair process requires 1 to 3 weeks.

Troubleshooting

Please take recommend action for each observation. Contact Bioneer Customer Service Center if problem continues after the recommended action.

Problems	Recommended Action
<i>Exicycler</i> ™ 96 Fast does not start.	 Make sure the power cable is firmly connected to the wall circuit, and then switch on the power supply button at the rear of <i>Exicycler</i>[™] 96 Fast. Check a fuse box located at the rear of <i>Exicycler</i>[™] 96 Fast. Change the fuse if it has blown.
Errors occur either after or during self-diagnosis (Status LED in red).	 The lamp may still be cooling down or the self-diagnosis is still running. If the status LED does not turn back to green in 3 minutes, turn off <i>Exicycler</i>[™] 96 Fast and turn it on again. If the same error occurs, please contact Bioneer Customer Service Center for help. Turn off <i>Exicycler</i>[™] 96 Fast if unexpected errors occur. Turn on <i>Exicycler</i>[™] 96 Fast again to cool down the lamp and wait for 3 minutes. Press the POWER button to start self-diagnosis. Please contact Bioneer Customer Service Center if the same error keeps occurring.
No communication detected between the computer and <i>Exicycler</i> [™] 96 Fast.	 Make sure that the USB cable is firmly connected to the computer. Ensure you use the USB cable provided with <i>Exicycler</i>[™] 96 Fast to connect the computer and <i>Exicycler</i>[™] 96 Fast. Check if <i>Exicycler</i>[™] 96 Fast is in the "Standby" mode. The status LED must blink in green. Turn off <i>Exicycler</i>[™] 96 Fast and back on again if the status LED still blinks in red.
The POWER button or the DOOR button does not work.	 Make sure that the power cable is firmly connected to the wall circuit, and then switch on the power supply button at the rear of <i>Exicycler</i>[™] 96 Fast. The self-diagnosis may be still running. Wait until the self-diagnosis is complete and the POWER button blinks in green.
<i>Exicycler</i> ™ 96 Fast has stopped running.	 Check if the electricity is supplied properly. Operate an AVR or UPS if needed. Disable Screen Saver and Monitor Power in the Control Panel. Ensure you use the USB cable provided with <i>Exicycler</i>[™] 96 Fast to connect the computer and the <i>Exicycler</i>[™] 96 Fast. Check if the USB driver is installed properly. If not, reinstall it again. Do not plug in any other USB cables in the computer while <i>Exicycler</i>[™] 96 Fast is running to prevent friction between <i>Exicycler</i>[™] 96 Fast and the computer.

<i>Exicycler</i> ™ 96 Fast does not start a thermal cycling.	 Exicycler[™] 96 Fast may still be in the "Standby" mode in order to warm up the lamp. Warming up the lamp takes about 10 minutes. The thermal cycling will start automatically after the lamp warm up has finished.
Intensity of fluorescence signal is low.	 Either examine fluorescence signal of the probe used for Real- Time PCR or use a new kit. The PCR product amplified may be too long or there may be non -specific products. Perform gel electrophoresis to determine the presence of amplification product or adjust an annealing temperature or Mg2⁺ concentration if needed. Perform the calibrations again to adjust the light intensity of the lamp.
Excessively high intensity of fluorescence signal.	 Adjust concentration of the probe used for Real-Time PCR. Make sure you use an appropriate probe system. Adjust and optimize the PCR sample conditions.
The software shuts down abnormally.	1. The USB driver is not been installed properly. Re-install the USB driver.
PCR sample has evaporated.	 Check if the heating lid works or if the sample tubes or plates are completely sealed with the sealing tape. Ensure the heating lid option is set up correctly. The Hottop Check Box must be selected and correct temperature must be set up. A small amount of evaporation is not critical. It is recommended that you use Bioneer kits and reagents to prevent PCR sample evaporation.
No PCR products are amplified.	 Perform gel electrophoresis to determine the presence of amplification products. Adjust an annealing temperature or Mg2⁺ concentration if needed.
No fluorescent signal is detected although PCR product is amplified.	 Either examine fluorescence signal of the probe used for Real- Time PCR or use a new intercalating dye. Perform the calibrations again to adjust the light intensity of the lamp.
Pop-up message during calibration process.	 Background Calibration finished will appear if the Background Calibration is successful. Can't Read Data from EEPROM will appear if the computer cannot read data from <i>Exicycler</i>[™] 96 Fast. Check if the USB cable is firmly connected between the computer and <i>Exicycler</i>[™] 96 Fast. Can't close program during PCR will appear if you attempt to close <i>Exicycler</i>[™] 96 Fast software while PCR is still running.
Exicycler[™] 96 Fast / Real-time Quantitative Thermal Block

Pop-up message during calibration process. (Continue)	 Do you want to stop PCR? will appear if you click Stop button during the Multi-channel Calibration. Did you add plate on the bath? will appear to make sure that the calibration plate is loaded in the thermal block prior to PCR. Mask Calibration finished will appear if the Mask Calibration is complete. Multi-Channel Calibration finished will appear if the Multi-channel Calibration is successful. Need to set up Machine ID will appear if an instrument ID has not been set up for <i>Exicycler</i>TM 96 Fast. Assign the ID using <i>Exicycler</i>TM 96 Fast software. No matching calibration data with machine will appear if the instrument ID does not match the ID from <i>Exicycler</i>TM 96 Fast software. No matching still on. To close ExiCfg, turn off the lamp first and then close the ExiCfg. Please load Mask Calibration Information first will appear if you attempt to perform the Uniform Calibration before the Mask Calibration. USB Communication is NOT Initialized will appear if the computer and <i>Exicycler</i>TM 96 Fast are not communicating with each other. Check if the USB cable between the computer and the <i>Exicycler</i>TM 96 Fast is firmly connected. You must insert New Dye Name will appear if a new name is not assigned to a custom dye.
Error message when running <i>Exicycler</i> ™ 96 Fast software.	 Can't exit program during PCR will appear if you click Stop button in Exicycler[™] 96 Fast software while PCR is still running. Can't open data during PCR will appear if you select File > Open Data from the top menu while PCR is still running. Can't Pause during Melting Protocol will appear if you click Pause button while the melting step is still running. Can't read data from EEPROM will appear if errors occur during PCR and the computer cannot read data from Exicycler[™] 96 Fast. Can't read Plate Information will appear if you attempt to open an outdated plate file. Can't Stop during Melting Protocol will display if you attempt to stop the Exicycler[™] 96 Fast software while the melting step is running.

Error message when running <i>Exicycler</i> ™ 96 Fast software. (Continue)	7.	Communication between machine and S/W was not initialized will display if you click Run button when <i>Exicycler</i> [™] 96 Fast is not ready
	8.	Do you want to stop PCR? will display if you click Stop button while PCP is still running
	9.	Fail to load calibration information will appear if the computer
		fails to read the calibration data from <i>Exicycler</i> [™] 96 Fast. Go to
	10	C: ₩Exicycler4 to check if the calibration folder and file exist.
	10.	melting step is inserted within a thermal cycling.
	11.	Need to replace the Lamp will appear if the lamp intensity drops
		below 60% of the normal lamp intensity. Replace the lamp.
	12.	No matching calibration data with Machine. Can't Run! will
		appear if you click Hun button when <i>Exicycler</i> ¹¹⁰ 96 Fast ID and the calibration data ID do not match
	13.	No matching calibration data with machine will appear if the
		<i>Exicycler</i> [™] 96 Fast ID and the calibration data ID do not match.
	14.	Please insert any protocol before inserting Goto Protocol will
		appear if the Goto step is inserted in the first line of a protocol
	15.	Please insert Data name will appear if you have not entered a
		name for data prior to PCR running.
	16.	Probe Information was changed, do you want to cancel this? will
		appear if you click the Cancel button without saving the edited
	17	probe information. Probe using same filter is assigned will appear if you assign more
		than 2 probe options within the same wavelength range.
	18.	Ramping rate option Must be inserted between Incubation steps
		will appear if you insert a ramping rate option in a wrong
	10	position of the protocol file.
	19.	for the custom probe in the Add Probe window.
	20.	UserName was already in User List will appear when entering an
		existing name for User set-up.
	21.	You must select Dye and Quencher will display if the dye and que
		ncher set up has not been selected in the Ada Probe window.
	1	

Ordering Information and Warranty

Ordering Information

Product		
A-2060-2	<i>Exicycler</i> [™] 96 Fast Real Time Quantitative Thermal Block	
Accessories		
A-2060-A2	AccuPower [®] Fluorescence test kit for <i>Exicycler</i> ™ 96 Fast	
Plastic consuma	bles	
3111-41	Adhesive Optical Sealing Film, 100 sheets	
3111-51	0.1 ml Opaque White 8-strip, Low Profile PCR Tube, 250 Strips	
3111-53	Opaque White 96-well Skirted, Low Profile PCR Plate, 25 Plates	
Premix & Reagent		
K-6253	AccuPower [®] 2X Greenstar [™] qPCR Master Mix / 100Rxn, 50 µL reaction	
K-6254	AccuPower [®] 2X Greenstar™ qPCR Master Mix / 200Rxn, 50 µL reaction	
K-6603	<i>AccuPower[®] Plus DualStar</i> ™ qPCR Master Mix(2X), 2.5mI, 100 rxn	
K-6703	<i>AccuPower[®] RocketScript</i> ™ RT-qPCR Master Mix (2X), 2.5ml, 100rxn	

Warranty

This Bioneer brand product, as supplied and distributed by Bioneer Corporation, is warranted by Bioneer against manufacturing defects in materials and workmanship for a limited warranty period of one year.

Product	Exicycler [™] 96 Fast Real-Time Quantitative Thermal Block
Catalog No.	A-2060-2
Serial No.	
Date of Purchase	/ (dd/mm/yy)
Warranty Period	For 12 months from purchasing date

1. How to request warranty service

Please fill out the service request form attached to this manual and submit it to us by fax or mail. For prompt service, please have the problem log and the experimental file ready before contacting us. For more details, please contact Bioneer Customer Service Center or your local distributor. You may call us at +82-42-930-8777 for minor problems. The service request result will be notified to you within 7 business days and the system will be repaired or replaced within 1~3 weeks.

2. Repairs under warranty

During the one-year warranty period, Bioneer will repair all defective products free of charge.

3. Exclusion from warranty

The product is excluded from warranty if:

- The product has been found to be defective after expiry of the warranty period.
- The product has been subjected to misuse, abuse, or unauthorized repair, whether by accident or other cause.
- Product is damaged beyond repair due to natural disaster.

Service Request Form				
Product	<i>Exicycler</i> ™ 96 Fa	Exicycler [™] 96 Fast Real-Time Quantitative Thermal Block		
Catalog No.	A-2060-2		Serial No.	
Date of request				
Date of purchase				
	* Please list one	service issue o	r concern per line	
	Issue 1			
Service	Issue 2			
Issue	Issue 3			
	Issue 4			
	Name			
Queters	Company			
	Name			
mormation	Contact	Phone:		Fax:
	E – mail			

Exicycler[™] 96 Fast / Real-time Quantitative Thermal Block

Revision History

Rev. No.	Rev. Date	Reason	Revision contents	etc
1.0	21/July/2014	First issue	First description	
1.1	11/July/2016	Document Form changes	BQ-042-101-01 Rev.1 (2015-11-06)	
1.2	08/Dec/2016	Document Form changes	BQ-042-101-01 Rev.2 (2016-11-04)	

Bioneer Worldwide

Bioneer Corporation

Address	8-11 Munpyeongseo-ro, Daedeok-gu, Daejeon, 34302, Republic of Korea
Tel	+82-42-930-8777 (Korea: 1588-9788)
Fax	+82-42-930-8688
E-mail	sales@bioneer.com
Web	www.bioneer.com

Bioneer Inc.

Address	1301 Marina Village PKWY, Suite 110, Alameda, CA 94501, USA
Tel	+1-877-264-4300 (Toll-free)
Fax	+1-510-865-0350
E-mail	order.usa@bioneer.com
Web	us.bioneer.com

Bioneer R&D Center

Address	Korea Bio Park BLDG #B-702, 700 Daewangpangyo-ro, Bundang-gu, Seongnam-si
	Gyeonggi-do, 13488, Republic of Korea
Tel	+82-31-628-0500
Fax	+82-31-628-0555
E-mail	sales@bioneer.co.kr
Web	www.bioneer.co.kr

